



SERVICE LITERATURE CATALOG



WINNEBAGO INDUSTRIES

Service Literature

| Item | Reference | Part No. |
|-------------------------|--|---------------|
| WIRING DIAGRAMS: | | |
| 1990 Wiring Diagrams | All 1990 model year coaches | 701674-12-000 |
| 1991 Wiring Diagrams | All 1991 model year coaches | 701674-13-000 |
| 1992 Wiring Diagrams | All 1992 model year coaches | 701674-14-000 |
| 1993 Wiring Diagrams | All 1993 model year coaches | 701674-15-000 |
| 1995 Wiring Diagrams | All 1995 model year coaches | 701674-22-000 |
| 1997 Wiring Diagrams | 1997 Rialta and Eurovan | 701674-42-000 |
| 1997 Wiring Diagrams | 1997 Minnie/Minnie Winnie/Sundancer | 701674-42-001 |
| 1997 Wiring Diagrams | 1997 Warrior | 701674-42-002 |
| 1997 Wiring Diagrams | 1997 Brave and Sunrise | 701674-42-003 |
| 1997 Wiring Diagrams | 1997 Adventurer and Suncruiser | 701674-42-004 |
| 1997 Wiring Diagrams | 1997 Vectra and Vectra Grand Tour | 701674-42-005 |
| 1997 Wiring Diagrams | 1997 Luxor | 701674-42-006 |
| 1998 Wiring Diagrams | 1998 Rialta and Eurovan | 701674-46-000 |
| 1998 Wiring Diagrams | 1998 Minnie/Minnie Winnie/Sundancer | 701674-46-001 |
| 1998 Wiring Diagrams | 1998 Brave and Sunrise | 701674-46-002 |
| 1998 Wiring Diagrams | 1998 Adventurer and Suncruiser | 701674-46-003 |
| 1998 Wiring Diagrams | 1998 Chieftain and Sunflyer | 701674-46-004 |
| 1998 Wiring Diagrams | 1998 Vectra Grand Tour | 701674-46-005 |
| 1998 Wiring Diagrams | 1998 Luxor | 701674-46-006 |
| 1999 Wiring Diagrams | 1999 Rialta and Eurovan | 701674-48-000 |
| 1999 Wiring Diagrams | 1999 Class C | 701674-48-001 |
| 1999 Wiring Diagrams | 1999 Brave and Sunrise | 701674-48-002 |
| 1999 Wiring Diagrams | 1999 Adventurer and Suncruiser | 701674-48-003 |
| 1999 Wiring Diagrams | 1999 Chieftain and Sunflyer | 701674-48-004 |
| 1999 Wiring Diagrams | 1999 Vectra Grand Tour | 701674-48-005 |
| 1999 Wiring Diagrams | 1999 Ultimate | 701674-48-006 |
| 2000 Wiring Diagrams | 2000 Rialta/EuroVan Wiring & Plumbing Diagrams | 701674-61-000 |
| 2000 Wiring Diagrams | 2000 Minnie/Minnie Winnie/Sundancer | 701674-61-001 |
| 2000 Wiring Diagrams | 2000 Brave and Sunrise | 701674-61-002 |
| 2000 Wiring Diagrams | 2000 Adventurer and Suncruiser | 701674-61-003 |
| 2000 Wiring Diagrams | 2000 Chieftain and Sunflyer | 701674-61-004 |
| 2000 Wiring Diagrams | 2000 Journey and Horizon | 701674-61-005 |
| 2000 Wiring Diagrams | 2000 Ultimate Advantage and Freedom | 701674-61-006 |
| 2001 Wiring Diagrams | 2001 Rialta/EuroVan Wiring & Plumbing Diagrams | 701674-61-000 |
| 2001 Wiring Diagrams | 2001 Minnie/Minnie Winnie/Sundancer | 701674-65-001 |
| 2001 Wiring Diagrams | 2001 Brave and Sunrise | 701674-66-001 |
| 2001 Wiring Diagrams | 2001 Adventurer and Suncruiser | 701674-67-001 |
| 2001 Wiring Diagrams | 2001 Chieftain and Sunflyer | 701674-68-001 |
| 2001 Wiring Diagrams | 2001 Journey and Horizon | 701674-69-001 |
| 2001 Wiring Diagrams | 2001 Ultimate Advantage and Freedom | 701674-70-001 |
| 2002 Wiring Diagrams | 2002 Rialta Wiring Diagrams | 701674-64-002 |
| 2002 Wiring Diagrams | 2002 Minnie/MW/Sundancer Wiring Diagrams | 701674-65-002 |
| 2002 Wiring Diagrams | 2002 Brave/Sunrise Wiring Diagrams | 701674-66-002 |
| 2002 Wiring Diagrams | 2002 Adventurer/Suncruiser Wiring Diagrams | 701674-67-002 |
| 2002 Wiring Diagrams | 2002 Chieftain/Sunflyer Wiring Diagrams | 701674-68-002 |
| 2002 Wiring Diagrams | 2002 Journey/Horizon Wiring Diagrams | 701674-68-002 |
| 2002 Wiring Diagrams | 2002 Advantage/Freedom Wiring Diagrams | 701674-70-002 |
| 2002 Wiring Diagrams | 2002 Sightseer/Sunova Wiring Diagrams | 701674-71-002 |
| 2003 Wiring Diagrams | 2003 EuroVan Wiring Diagrams 117A | 701674-72-001 |
| 2003 Wiring Diagrams | 2003 Rialta Wiring Diagrams 222FD | 701674-72-002 |
| 2003 Wiring Diagrams | 2003 Rialta Wiring Diagrams 222HD | 701674-72-003 |
| 2003 Wiring Diagrams | 2003 Rialta Wiring Diagrams 222QD | 701674-72-004 |
| 2003 Wiring Diagrams | 2003 Vista/Sunstar Wiring Diagrams 221B | 701674-72-005 |

| Item | Reference | Part No. |
|----------------------|--|---------------|
| 2003 Wiring Diagrams | 2003 Minnie/Spirit Wiring Diagrams 322E | 701674-72-006 |
| 2003 Wiring Diagrams | 2003 Minnie/Spirit Wiring Diagrams 322R | 701674-72-007 |
| 2003 Wiring Diagrams | 2003 Minnie/Spirit Wiring Diagrams 324F | 701674-72-008 |
| 2003 Wiring Diagrams | 2003 Minnie/Spirit Wiring Diagrams 324V | 701674-72-009 |
| 2003 Wiring Diagrams | 2003 Minnie/Spirit Wiring Diagrams 329B | 701674-72-010 |
| 2003 Wiring Diagrams | 2003 Minnie Wiring Diagrams 331C | 701674-72-011 |
| 2003 Wiring Diagrams | 2003 Spirit Wiring Diagrams 331T | 701674-72-012 |
| 2003 Wiring Diagrams | 2003 Minnie Winnie/Sundancer Wiring Diagrams 427P | 701674-72-013 |
| 2003 Wiring Diagrams | 2003 Minnie Winnie/Sundancer Wiring Diagrams 430V | 701674-72-014 |
| 2003 Wiring Diagrams | 2003 Minnie Winnie/Sundancer Wiring Diagrams 431C | 701674-72-015 |
| 2003 Wiring Diagrams | 2003 Sightseer/Sunova Wiring Diagrams D27C | 701674-72-016 |
| 2003 Wiring Diagrams | 2003 Sightseer/Sunova Wiring Diagrams D30B | 701674-72-017 |
| 2003 Wiring Diagrams | 2003 Sightseer/Sunova Wiring Diagrams D33L | 701674-72-018 |
| 2003 Wiring Diagrams | 2003 Brave/Sunrise Wiring Diagrams F30W | 701674-72-019 |
| 2003 Wiring Diagrams | 2003 Brave/Sunrise Wiring Diagrams F32V | 701674-72-020 |
| 2003 Wiring Diagrams | 2003 Brave/Sunrise Wiring Diagrams F34D | 701674-72-021 |
| 2003 Wiring Diagrams | 2003 Brave/Sunrise Wiring Diagrams F36M | 701674-72-022 |
| 2003 Wiring Diagrams | 2003 Adventurer/Suncruiser Wiring Diagrams G31Y | 701674-72-023 |
| 2003 Wiring Diagrams | 2003 Adventurer/Suncruiser Wiring Diagrams G33V | 701674-72-024 |
| 2003 Wiring Diagrams | 2003 Adventurer/Suncruiser Wiring Diagrams G35U | 701674-72-025 |
| 2003 Wiring Diagrams | 2003 Adventurer/Suncruiser Wiring Diagrams G37C | 701674-72-026 |
| 2003 Wiring Diagrams | 2003 Adventurer/Suncruiser Wiring Diagrams G38G | 701674-72-027 |
| 2003 Wiring Diagrams | 2003 Chieftain/Sunflyer Wiring Diagrams L36W | 701674-72-028 |
| 2003 Wiring Diagrams | 2003 Chieftain/Sunflyer Wiring Diagrams L39T | 701674-72-029 |
| 2003 Wiring Diagrams | 2003 Journey/Journey DL/Horizon Wiring Diagrams L36W | 701674-72-030 |
| 2003 Wiring Diagrams | 2003 Journey Wiring Diagrams P32T | 701674-72-031 |
| 2003 Wiring Diagrams | 2003 Journey Wiring Diagrams P34H | 701674-72-032 |
| 2003 Wiring Diagrams | 2003 Journey Wiring Diagrams P36C | 701674-72-033 |
| 2003 Wiring Diagrams | 2003 Journey Wiring Diagrams P36L | 701674-72-034 |
| 2003 Wiring Diagrams | 2003 Journey DL/Horizon Wiring Diagrams P34H | 701674-72-035 |
| 2003 Wiring Diagrams | 2003 Journey DL Wiring Diagrams P36GD | 701674-72-036 |
| 2003 Wiring Diagrams | 2003 Journey DL/Horizon Wiring Diagrams P36LD | 701674-72-037 |
| 2003 Wiring Diagrams | 2003 Journey DL/Horizon Wiring Diagrams P39QD | 701674-72-038 |
| 2003 Wiring Diagrams | 2003 Journey DL/Horizon Wiring Diagrams P39WD | 701674-72-039 |
| 2003 Wiring Diagrams | 2003 Ultimate Advantage Wiring Diagrams Q36C | 701674-72-040 |
| 2003 Wiring Diagrams | 2003 Ultimate Advantage Wiring Diagrams Q38K | 701674-72-041 |
| 2003 Wiring Diagrams | 2003 Ultimate Advantage Wiring Diagrams Q40E | 701674-72-042 |
| 2003 Wiring Diagrams | 2003 Ultimate Advantage Wiring Diagrams Q40K | 701674-72-043 |
| 2003 Wiring Diagrams | 2003 Ultimate Advantage Wiring Diagrams Q40ED | 701674-72-044 |
| 2003 Wiring Diagrams | 2003 Ultimate Advantage Wiring Diagrams Q40KD | 701674-72-045 |

PLUMBING DIAGRAMS:

| | | |
|-------------------------------|-------------------------------------|----------------------|
| 1997 Plumbing Diagrams | 1997 Rialta and Eurovan | 701674-43-000 |
| 1997 Plumbing Diagrams | 1997 Minnie/Minnie Winnie/Sundancer | 701674-43-001 |
| 1997 Plumbing Diagrams | 1997 Warrior | 701674-43-002 |
| 1997 Plumbing Diagrams | 1997 Brave and Sunrise | 701674-43-003 |
| 1997 Plumbing Diagrams | 1997 Adventurer and Suncruiser | 701674-43-004 |
| 1997 Plumbing Diagrams | 1997 Vectra and Vectra Grand Tour | 701674-43-005 |
| 1997 Plumbing Diagrams | 1997 Luxor | 701674-43-006 |
| 1998 Plumbing Diagrams | 1998 Rialta and Eurovan | 701674-47-000 |
| 1998 Plumbing Diagrams | 1998 Minnie/Minnie Winnie/Sundancer | 701674-47-001 |
| 1998 Plumbing Diagrams | 1998 Brave and Sunrise | 701674-47-002 |
| 1998 Plumbing Diagrams | 1998 Adventurer and Suncruiser | 701674-47-003 |
| 1998 Plumbing Diagrams | 1998 Chieftain and Sunflyer | 701674-47-004 |
| 1998 Plumbing Diagrams | 1998 Vectra Grand Tour | 701674-47-005 |
| 1998 Plumbing Diagrams | 1998 Luxor | 701674-47-006 |

| Item | Reference | Part No. |
|-----------------------------------|--|---------------|
| PLUMBING DIAGRAMS (Cont.): | | |
| 1999 Plumbing Diagrams | 1999 Rialta and Eurovan | 701674-49-000 |
| 1999 Plumbing Diagrams | 1999 Minnie/Minnie Winnie/Sundancer | 701674-49-001 |
| 1999 Plumbing Diagrams | 1999 Brave and Sunrise | 701674-49-002 |
| 1999 Plumbing Diagrams | 1999 Adventurer and Suncruiser | 701674-49-003 |
| 1999 Plumbing Diagrams | 1999 Chieftain and Sunflyer | 701674-49-004 |
| 1999 Plumbing Diagrams | 1999 Vectra Grand Tour | 701674-49-005 |
| 1999 Plumbing Diagrams | 1999 Ultimate | 701674-49-006 |
| 2000 Wiring Diagrams | 2000 Rialta/EuroVan Wiring & Plumbing Diagrams | 701674-61-000 |
| 2000 Plumbing Diagrams | 2000 All Models except Rialta & Eurovan | 701674-62-000 |
| 2001 Plumbing Diagrams | 2001 All Models except Rialta & Eurovan | 701674-62-001 |
| SERVICE BULLETINS: | | |
| '78 Service Bulletins | All '78 - complete set - bound | 701677-25-000 |
| '84/'85 Service Bulletins | All '84 & '85 - complete set - bound | 701677-30-000 |
| '86/'87 Service Bulletins | All '86 & '87 - complete set - bound | 701677-31-000 |
| '89 Service Bulletins | All '89 - complete set - bound | 701677-33-000 |
| '90 Service Bulletins | All '90 - complete set - bound | 701677-34-000 |
| '93 Service Bulletins | All '93 - complete set - bound | 701677-37-000 |
| '94 Service Bulletins | All '94 - complete set - bound | 701677-39-000 |
| '95 Service Bulletins | All '95 - complete set - bound | 701677-D6-000 |
| '96 Service Bulletins | All '96 - complete set - bound | 701677-E6-000 |
| '97 Service Bulletins | All '97 - complete set - bound | 701677-F7-000 |
| '98 Service Bulletins | All '98 - complete set - bound | 701677-G7-000 |
| '99 Service Bulletins | All '99 - complete set - bound | 701677-H5-000 |
| '00 Service Bulletins | All '00 - complete set - bound | 701677-J1-000 |
| '01 Service Bulletins | All '01 - complete set - bound | 701677-K1-000 |
| SERVICE MANUALS: | | |
| GENERAL REPAIR: | | |
| Motor Home Service Repair Manual | '77-'80 | 701674-02-000 |
| Floor Repair Guide | All Models | 701674-30-000 |
| BODY REPAIR: | | |
| Body Repair Manual | 1988 - 1995 model year coaches | 701674-24-000 |
| Luxor Sidewall Repair Guide | 1995 Luxor coaches | 701674-21-000 |
| Paint Code Manual | 1970 - 1996 model year coaches | 701674-23-000 |
| Paint Code Manual | 1997 model year coaches | 701674-23-001 |
| Paint Code Manual | 1998 model year coaches | 701674-23-002 |
| Paint Code Manual | 1999 and 2000 model year coaches | 701674-23-003 |
| ELECTRICAL: | | |
| Electrical Repair Manual | All models | 701674-25-000 |
| LP GAS: | | |
| LP Gas Service Manual | All Models | 701674-27-000 |
| APPLIANCE: | | |
| SLIDE-OUT: | | |
| Slide-out Room Adjustment Manual | 1997 Adventurer/Suncruiser and Vectra | 701674-41-000 |
| CHASSIS: | | |
| Jet Air Troubleshooting Manual | All Models | 701674-34-000 |
| RIALTA: | | |
| Rialta Service Manual | 1995 and newer Rialta | 701674-19-000 |

| Item | Reference | Part No. |
|--|--------------------------|---------------|
| EUROVAN: | | |
| EuroVan Camper Service Manual | EuroVan Camper | 701674-18-000 |
| PARTS AND WARRANTY: | | |
| 2003 WIN NET Parts, Warranty, and Sales Data Entry | System Operations Manual | 701674-51-000 |
| 2003 A&C Tic Manual | Class A & C Coaches | 701677-K8-003 |
| 2003 Rialta Tic Manual | Rialta | 701677-G8-000 |
| 2003 Policy and Procedure Manual | All Models | 701677-J6-000 |
| Warranty Part Tag | | 701677-83-000 |
| OPERATORS MANUALS: | | |
| 1967: | | |
| Winnebago Motor Home Operators Manual | Class-A | 001967-01-000 |
| 1969: | | |
| Winnebago Motor Home Operators Manual | Class-A | 001969-01-000 |
| 1970: | | |
| Winnebago Motor Home Operators Manual | Class-A | 001970-01-000 |
| 1971: | | |
| Winnebago Motor Home Operators Manual | Class-A | 001971-01-000 |
| 1972: | | |
| Winnebago Motor Home Operators Manual | Class-A | 001972-01-000 |
| Winnebago Camper Operators Manual | Pickup camper coach | 001972-02-000 |
| Winnebago Travel Trailer Operators Manual | All '72 trailers | 001972-03-000 |
| 1973: | | |
| Winnebago Indian Operators Manual | Class-A | 001973-01-000 |
| Winnebago Brave Operators Manual | Class-A | 001973-02-000 |
| Winnebago Chieftain Operators Manual | Class-A | 001973-04-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 001973-05-000 |
| Winnebago Travel Trailer Operators Manual | All '73 trailers | 001973-06-000 |
| Winnebago Camper Operators Manual | Pickup camper coach | 001973-07-000 |
| 1974: | | |
| Winnebago Indian Operators Manual | Class-A | 001974-01-000 |
| Winnebago Brave Operators Manual | Class-A | 001974-02-000 |
| Winnebago Chieftain Operators Manual | Class-A | 001974-03-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 001974-04-000 |
| Winnebago Winnie Wagon Operators Manual | Class-C | 001974-05-000 |
| Winnebago Travel Trailer Operators Manual | All '74 trailers | 001974-06-000 |
| 1975: | | |
| Winnebago Indian/Brave Operators Manual | Class-A | 001975-01-000 |
| Winnebago Brave Operators Manual | Class-A | 001975-02-000 |
| Winnebago Chieftain Operators Manual | Class-A | 001975-03-000 |
| Winnebago Custom Operators Manual | Class-A | 001975-04-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 001975-05-000 |
| Winnebago Expo Operators Manual | Class-A | 001975-07-000 |
| Winnebago Travel Trailer Operators Manual | Trailer and 5th-Wheel | 001975-08-000 |
| Winnebago Travel Trailer Operators Manual | 13' trailer | 001975-09-000 |
| Winnebago Camper Operators Manual | Pickup camper coach | 001975-10-000 |
| Itasca Mini-Motor Home Operators Manual | Class-C | 001975-11-000 |
| Itasca Motor Home Operators Manual | Class-A | 001975-12-000 |

| Item | Reference | Part No. |
|--|------------------|---------------|
| 1976: | | |
| Winnebago Chieftain Operators Manual | Class-A | 001976-01-000 |
| Winnebago Brave Operators Manual | Class-A | 001976-02-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 001976-03-000 |
| Winnebago Custom Operators Manual | Class-A | 001976-04-000 |
| Winnebago Elandan Operators Manual | Class-A | 001976-05-000 |
| Winnebago Sportsman's Den Operators Manual | Class-C | 054185-59-000 |
| Winnebago C25CR Operators Manual | Class-C | 001976-07-000 |
| Itasca Motor Home Operators Manual | Class-A | 054185-55-000 |
| 1977: | | |
| Itasca Motor Home Operators Manual | Class A and C | 001977-01-000 |
| Winnebago Motor Home Operators Manual | Class A and C | 054185-01-000 |
| 1978: | | |
| Winnebago Motor Home Operators Manual | Class A and C | 054185-01-000 |
| Itasca Motor Home Operators Manual | Class A and C | 054185-02-000 |
| 1979: | | |
| Winnebago Motor Home Operators Manual | Class A and C | 054185-03-000 |
| Itasca Motor Home Operators Manual | Class A and C | 054185-04-000 |
| Winnebago Travel Trailer Operators Manual | All '79 trailers | 054185-05-000 |
| 1980: | | |
| Itasca Motor Home Operators Manual | Class A | 054185-07-000 |
| Winnebago Winnie Wagon Operators Manual | Class-C | 054185-08-000 |
| Winnebago Travel Trailer Operators Manual | 5th-Wheel & TR | 054185-10-000 |
| Winnebago Travel Trailer Operators Manual | LLT Trailer | 054185-11-000 |
| 1981: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-12-000 |
| 1982: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-14-000 |
| 1983: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-19-000 |
| 1984: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-20-000 |
| 1985: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-22-000 |
| 1986: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-24-000 |
| 1987: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-26-000 |
| 1988: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-28-000 |
| 1989: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-31-000 |
| 1990: | | |
| Winnebago/Itasca Motor Home Operators Manual | Class A and C | 054185-35-000 |

| Item | Reference | Part No. |
|---|-----------|---------------|
| 1991: | | |
| Toy Operators Manual | Class-C | 054185-76-000 |
| Winnebago Warrior Operators Manual | Class-C | 054185-63-000 |
| Winnebago Warrior Operators Manual | Class-A | 054185-64-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 054185-65-000 |
| Winnebago Chieftain Operators Manual | Class-A | 054185-66-000 |
| Winnebago Superchief Operators Manual | Class-A | 054185-67-000 |
| Winnebago Elandan Operators Manual | Class-A | 054185-68-000 |
| Itasca Spirit Operators Manual | Class-C | 054185-70-000 |
| Itasca Spirit Operators Manual | Class-A | 054185-71-000 |
| Itasca Sundancer Operators Manual | Class-C | 054185-72-000 |
| Itasca Sunflyer Operators Manual | Class-A | 054185-73-000 |
| Itasca Suncruiser Operators Manual | Class-A | 054185-74-000 |
| Itasca Windcruiser Operators Manual | Class-A | 054185-75-000 |
| 1992: | | |
| Elanté Operators Manual | Class-A | 054185-83-000 |
| Winnebago Warrior Operators Manual | Class-C | 054185-78-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 054185-84-000 |
| Winnebago Minnie Winnie DL Operators Manual | Class-C | 054185-79-000 |
| Winnebago Brave Operators Manual | Class-A | 054185-80-000 |
| Winnebago Adventurer Operators Manual | Class-A | 054185-81-000 |
| Winnebago Chieftain Operators Manual | Class-A | 054185-82-000 |
| Itasca Spirit Operators Manual | Class-C | 054185-86-000 |
| Itasca Sundancer Operators Manual | Class-C | 054185-92-000 |
| Itasca Sundancer 500 Operators Manual | Class-C | 054185-87-000 |
| Itasca Sunrise Operators Manual | Class-A | 054185-88-000 |
| Itasca Sunflyer Operators Manual | Class-A | 054185-90-000 |
| Itasca Suncruiser Operators Manual | Class-A | 054185-89-000 |
| 1993: | | |
| Vectra Operators Manual | Class-A | 054185-42-000 |
| Elanté Operators Manual | Class-A | 054185-43-000 |
| Winnebago Warrior Operators Manual | Class-C | 054185-06-000 |
| Winnebago Warrior Operators Manual | Class-A | 054185-93-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 054185-33-000 |
| Winnebago Minnie Winnie DL Operators Manual | Class-C | 054185-37-000 |
| Winnebago Brave Operators Manual | Class-A | 054185-38-000 |
| Winnebago Adventurer Operators Manual | Class-A | 054185-39-000 |
| Winnebago Chieftain Operators Manual | Class-A | 054185-40-000 |
| Itasca Spirit Operators Manual | Class-C | 054185-44-000 |
| Itasca Sundancer Operators Manual | Class-C | 054185-50-000 |
| Itasca Sundancer 500 Operators Manual | Class-C | 054185-51-000 |
| Itasca Passage Operators Manual | Class-A | 054185-94-000 |
| Itasca Sunrise Operators Manual | Class-A | 054185-52-000 |
| Itasca Sunflyer Operators Manual | Class-A | 054185-54-000 |
| Itasca Suncruiser Operators Manual | Class-A | 054185-53-000 |
| 1994: | | |
| Vectra Operators Manual | Class-A | 054185-A7-000 |
| Elanté Operators Manual | Class-A | 054185-A9-000 |
| Winnebago Warrior Operators Manual | Class-C | 054185-A1-000 |
| Winnebago Warrior Operators Manual | Class-A | 054185-A4-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 054185-A2-000 |
| Winnebago Minnie Winnie DL Operators Manual | Class-C | 054185-A3-000 |
| Winnebago Brave Operators Manual | Class-A | 054185-A5-000 |

| Item | Reference | Part No. |
|--|------------------|-----------------|
| 1994 (Continued) | | |
| Winnebago Adventurer Operators Manual | Class-A | 054185-A6-000 |
| Winnebago Chieftain Operators Manual | Class-A | 054185-A8-000 |
| Itasca Spirit Operators Manual | Class-C | 054185-B2-000 |
| Itasca Sundancer Operators Manual | Class-C | 054185-B3-000 |
| Itasca Sundancer DL Operators Manual | Class-C | 054185-B4-000 |
| Itasca Passage Operators Manual | Class-A | 054185-B5-000 |
| Itasca Sunrise Operators Manual | Class-A | 054185-B6-000 |
| Itasca Suncruiser Operators Manual | Class-A | 054185-B7-000 |
| 1995: | | |
| EuroVan Camper Operators Manual (US) | Class-B (VW) | 054185-C1-000 |
| EuroVan Camper Operators Manual (Canadian) | Class-B (VW) | 054185-C1-001 |
| EuroVan Camper Operators Manual (Canadienne) | Class-B (VW) | 054185-C1-002 |
| Winnebago Minnie Operators Manual | Class-C | 054185-C2-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 054185-C3-000 |
| Winnebago Warrior Operators Manual | Class-A | 054185-C4-000 |
| Winnebago Brave Operators Manual | Class-A | 054185-C5-000 |
| Winnebago Adventurer Operators Manual | Class-A | 054185-C6-000 |
| Vectra Operators Manual | Class-A | 054185-C7-000 |
| Luxor Operators Manual | Class-A | 054185-B9-000 |
| Itasca Spirit Operators Manual | Class-C | 054185-C8-000 |
| Itasca Sundancer Operators Manual | Class-C | 054185-C9-000 |
| Itasca Passage Operators Manual | Class-A | 054185-D1-000 |
| Itasca Sunrise Operators Manual | Class-A | 054185-D2-000 |
| Itasca Suncruiser Operators Manual | Class-A | 054185-D3-000 |
| 1996: | | |
| EuroVan Camper Operators Manual (Canadian) | Class-B (VW) | 054185-D4-001 |
| EuroVan Camper Operators Manual (Canadienne) | Class-B (VW) | 054185-D4-002 |
| Winnebago Rialta Operators Manual | H-Body (VW) | 054185-D5-000 |
| Winnebago Minnie Operators Manual | Class-C | 054185-D6-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 054185-D7-000 |
| Winnebago Warrior Operators Manual | Class-A | 054185-D8-000 |
| Winnebago Brave Operators Manual | Class-A | 054185-D9-000 |
| Winnebago Adventurer Operators Manual | Class-A | 054185-E1-000 |
| Vectra Operators Manual | Class-A | 054185-E2-000 |
| Luxor Operators Manual | Class-A | 054185-E3-000 |
| Itasca Spirit Operators Manual | Class-C | 054185-E4-000 |
| Itasca Sundancer Operators Manual | Class-C | 054185-E5-000 |
| Itasca Passage Operators Manual | Class-A | 054185-E6-000 |
| Itasca Sunrise Operators Manual | Class-A | 054185-E7-000 |
| Itasca Suncruiser Operators Manual | Class-A | 054185-E8-000 |
| Luxor Operators Manual | Class-A | 054185-E9-000 |
| 1997: | | |
| EuroVan Camper Operators Manual (US) | Class-B (VW) | 054185-G5-000 |
| EuroVan Camper Operators Manual (Canadian) | Class-B (VW) | 054185-G5-001 |
| EuroVan Camper Operators Manual (Canadienne) | Class-B (VW) | 054185-G5-002 |
| Winnebago Rialta Operators Manual | H-Body (VW) | 054185-F2-000 |
| Winnebago Minnie Operators Manual | Class-C | 054185-F3-000 |
| Winnebago Minnie Winnie Operators Manual | Class-C | 054185-F5-000 |
| Winnebago Warrior Operators Manual | Class-A | 054185-F1-000 |
| Winnebago Brave Operators Manual | Class-A | 054185-F7-000 |
| Winnebago Adventurer Operators Manual | Class-A | 054185-F9-000 |
| Vectra Operators Manual | Class-A | 054185-G2-000 |
| Vectra Grand Tour Operators Manual | Class-A | 054185-G3-000 |

| Item | Reference | Part No. |
|---|---------------------|----------------------|
| 1997 (Continued) | | |
| Luxor Operators Manual | Class-A | 054185-G4-000 |
| Itasca Spirit Operators Manual | Class-C | 054185-F4-000 |
| Itasca Sundancer Operators Manual | Class-C | 054185-F6-000 |
| Itasca Sunrise Operators Manual | Class-A | 054185-F8-000 |
| Itasca Suncruiser Operators Manual | Class-A | 054185-G1-000 |
| 1998: | | |
| Rialta Operators | H-Body (VW) | 054185-G7-000 |
| Minnie 300 Series Operators Manual | Class C | 054185-G8-000 |
| Spirit 300 Series Operators Manual | Class C | 054185-H6-000 |
| Minnie Winnie 400 Series Operators Manual | Class C | 054185-G9-000 |
| Sundancer Operators Manual | Class C | 054185-H7-000 |
| Brave Operators Manual | Class A | 054185-H1-000 |
| Sunrise Operators Manual | Class A | 054185-H8-000 |
| Adventurer Operators Manual | Class A | 054185-H2-000 |
| Suncruiser Operators Manual | Class A | 054185-H9-000 |
| Chieftain Operators Manual | Class A | 054185-H3-000 |
| Sunflyer Operators Manual | Class A | 054185-I1-000 |
| Vectra Grand Tour Operators Manual | Class A | 054185-H4-000 |
| Luxor Operators Manual | Class A | 054185-H5-000 |
| 1999: | | |
| Eurovan Operators Manual | Class B (VW) | 054185-G6-000 |
| Rialta Operators Manual | H-Body (VW) | 054185-J7-000 |
| Minnie 300 Series Operators Manual | Class C | 054185-J8-000 |
| Spirit 300 Series Operators Manual | Class C | 054185-J9-000 |
| Minnie Winnie 400 Series Operators Manual | Class C | 054185-K1-000 |
| Sundancer Operators Manual | Class C | 054185-K2-000 |
| Brave Operators Manual | Class A | 054185-K3-000 |
| Sunrise Operators Manual | Class A | 054185-K4-000 |
| Adventurer Operators Manual | Class A | 054185-K5-000 |
| Ultimate Freedom Operators Manual | Class A | 054185-K6-000 |
| Suncruiser Operators Manual | Class A | 054185-J1-000 |
| Chieftain Operators Manual | Class A | 054185-J2-000 |
| Sunflyer Operators Manual | Class A | 054185-J3-000 |
| Vectra Grand Tour Operators Manual | Class A | 054185-J4-000 |
| Ultimate Advantage Operators Manual | Class A | 054185-J6-000 |
| 2000: | | |
| Eurovan Operators Manual | Class B (VW) | 132000-01-000 |
| Rialta Operators Manual | H-Body (VW) | 132000-02-000 |
| Minnie 300 Series Operators Manual | Class C | 132000-03-000 |
| Spirit 300 Series Operators Manual | Class C | 132000-12-000 |
| Minnie Winnie 400 Series Operators Manual | Class C | 132000-04-000 |
| Sundancer Operators Manual | Class C | 132000-13-000 |
| Brave Operators Manual | Class A | 132000-05-000 |
| Sunrise Operators Manual | Class A | 132000-14-000 |
| Adventurer Operators Manual | Class A | 132000-06-000 |
| Suncruiser Operators Manual | Class A | 132000-15-000 |
| Chieftain Operators Manual | Class A | 132000-07-000 |
| Sunflyer Operators Manual | Class A | 132000-16-000 |
| Horizon Operators Manual | Class A | 132000-08-000 |
| Journey Operators Manual | Class A | 132000-09-000 |
| Ultimate Freedom Operators Manual | Class A | 132000-10-000 |
| Ultimate Advantage Operators Manual | Class A | 132000-11-000 |

| Item | Reference | Part No. |
|---|--------------|---------------|
| 2001: | | |
| Eurovan Operators Manual | Class B (VW) | 132000-01-001 |
| Rialta Operators Manual | H-Body (VW) | 132000-02-001 |
| Minnie 300 Series Operators Manual | Class C | 132000-03-001 |
| Spirit 300 Series Operators Manual | Class C | 132000-12-001 |
| Minnie Winnie 400 Series Operators Manual | Class C | 132000-04-001 |
| Sundancer Operators Manual | Class C | 132000-13-001 |
| Brave Operators Manual | Class A | 132000-05-001 |
| Sunrise Operators Manual | Class A | 132000-14-001 |
| Adventurer Operators Manual | Class A | 132000-06-001 |
| Suncruiser Operators Manual | Class A | 132000-15-001 |
| Chieftain Operators Manual | Class A | 132000-07-001 |
| Sunflyer Operators Manual | Class A | 132000-16-001 |
| Horizon Operators Manual | Class A | 132000-08-001 |
| Journey Operators Manual | Class A | 132000-09-001 |
| Ultimate Freedom Operators Manual | Class A | 132000-10-001 |
| Ultimate Advantage Operators Manual | Class A | 132000-11-001 |
| 2002: | | |
| Eurovan Operators Manual | Class B (VW) | 132000-01-U02 |
| Rialta Operators Manual | H-Body (VW) | 132000-02-002 |
| Vista Operators Manual | Class C | 132000-20-002 |
| Sunstar Operator Manual | Class C | 132000-21-002 |
| Minnie 300 Series Operators Manual | Class C | 132000-03-002 |
| Spirit 300 Series Operators Manual | Class C | 132000-12-002 |
| Minnie Winnie 400 Series Operators Manual | Class C | 132000-04-002 |
| Sundancer Operators Manual | Class C | 132000-13-002 |
| 2002 Cont. | | |
| Sightseer Operators Manual | Class A | 132000-17-002 |
| Sunova Operators Manual | Class A | 132000-18-002 |
| Brave Operators Manual | Class A | 132000-05-002 |
| Sunrise Operators Manual | Class A | 132000-14-002 |
| Adventurer Operators Manual | Class A | 132000-06-002 |
| Suncruiser Operators Manual | Class A | 132000-15-002 |
| Chieftain Operators Manual | Class A | 132000-07-002 |
| Sunflyer Operators Manual | Class A | 132000-16-002 |
| Horizon Operators Manual | Class A | 132000-08-002 |
| Journey Operators Manual | Class A | 132000-09-002 |
| Journey DL Operators Manual | Class A | 132000-19-002 |
| Ultimate Freedom Operators Manual | Class A | 132000-10-002 |
| Ultimate Advantage Operators Manual | Class A | 132000-11-002 |
| 2003: | | |
| Eurovan Operators Manual | Class B (VW) | 132000-01-U03 |
| Rialta Operators Manual | H-Body (VW) | 132000-02-003 |
| Vista Operators Manual | Class C | 132000-20-003 |
| Sunstar Operator Manual | Class C | 132000-21-003 |
| Minnie 300 Series Operators Manual | Class C | 132000-03-003 |
| Spirit 300 Series Operators Manual | Class C | 132000-12-003 |
| Minnie Winnie 400 Series Operators Manual | Class C | 132000-04-003 |
| Sundancer Operators Manual | Class C | 132000-13-003 |
| Sightseer Operators Manual | Class A | 132000-17-003 |
| Sunova Operators Manual | Class A | 132000-18-003 |
| Brave Operators Manual | Class A | 132000-05-003 |
| Sunrise Operators Manual | Class A | 132000-14-003 |
| Adventurer Operators Manual | Class A | 132000-06-003 |
| Suncruiser Operators Manual | Class A | 132000-15-003 |