



DANGER

 
Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


CONNECTS TO WIRE ASM-ADAPTER, RADIO (SHT 3, H-8) (LOCATED BEHIND RADIO)

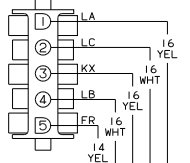

 
CONNECTS TO OVHD A/C (LOCATED IN FRONT CAB OVHD)








CONNECTS TO REAR WINDOW DEFOGGER SWITCH

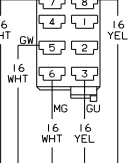 

CONNECTS TO REAR WIPER/WASHER SWITCH

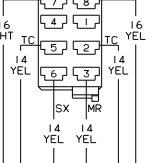 

CONNECTS TO AUX START SWITCH

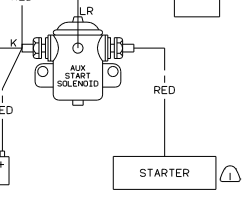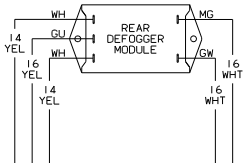     

TC
WH
AN
AM
AL
ML

GU
GY

MG

MN

 
 
 
 
 
MS

KW
AS














KY
AT

NF
JF
HX
MU
KT
KU


MK
NC
JC
KS

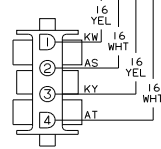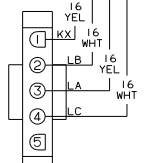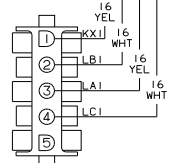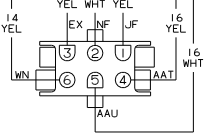

             
WIRING DIAGRAM-LEFT, FRONT (WIRE ASM 135730)

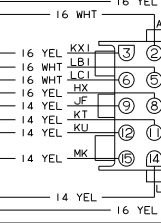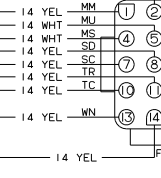

DATE	UNDESIGNED TOLERANCES ARE:	MATERIAL
DATE	ONE-PLACE (1X, 1X)	
DATE	TWO-PLACE (2X, 2X)	
DATE	THREE-PLACE (3X, 3X)	
DATE	FOUR-PLACE (4X, 4X)	
DATE	FIVE-PLACE (5X, 5X)	
DATE	SIX-PLACE (6X, 6X)	
DATE	SEVEN-PLACE (7X, 7X)	
DATE	EIGHT-PLACE (8X, 8X)	
DATE	NINE-PLACE (9X, 9X)	
DATE	TEN-PLACE (10X, 10X)	
DATE	ELEVEN-PLACE (11X, 11X)	
DATE	TWELVE-PLACE (12X, 12X)	
DATE	THIRTEEN-PLACE (13X, 13X)	
DATE	FOURTEEN-PLACE (14X, 14X)	
DATE	FIFTEEN-PLACE (15X, 15X)	
DATE	SIXTEEN-PLACE (16X, 16X)	
DATE	SEVENTEEN-PLACE (17X, 17X)	
DATE	EIGHTEEN-PLACE (18X, 18X)	
DATE	NINETEEN-PLACE (19X, 19X)	
DATE	TWENTY-PLACE (20X, 20X)	

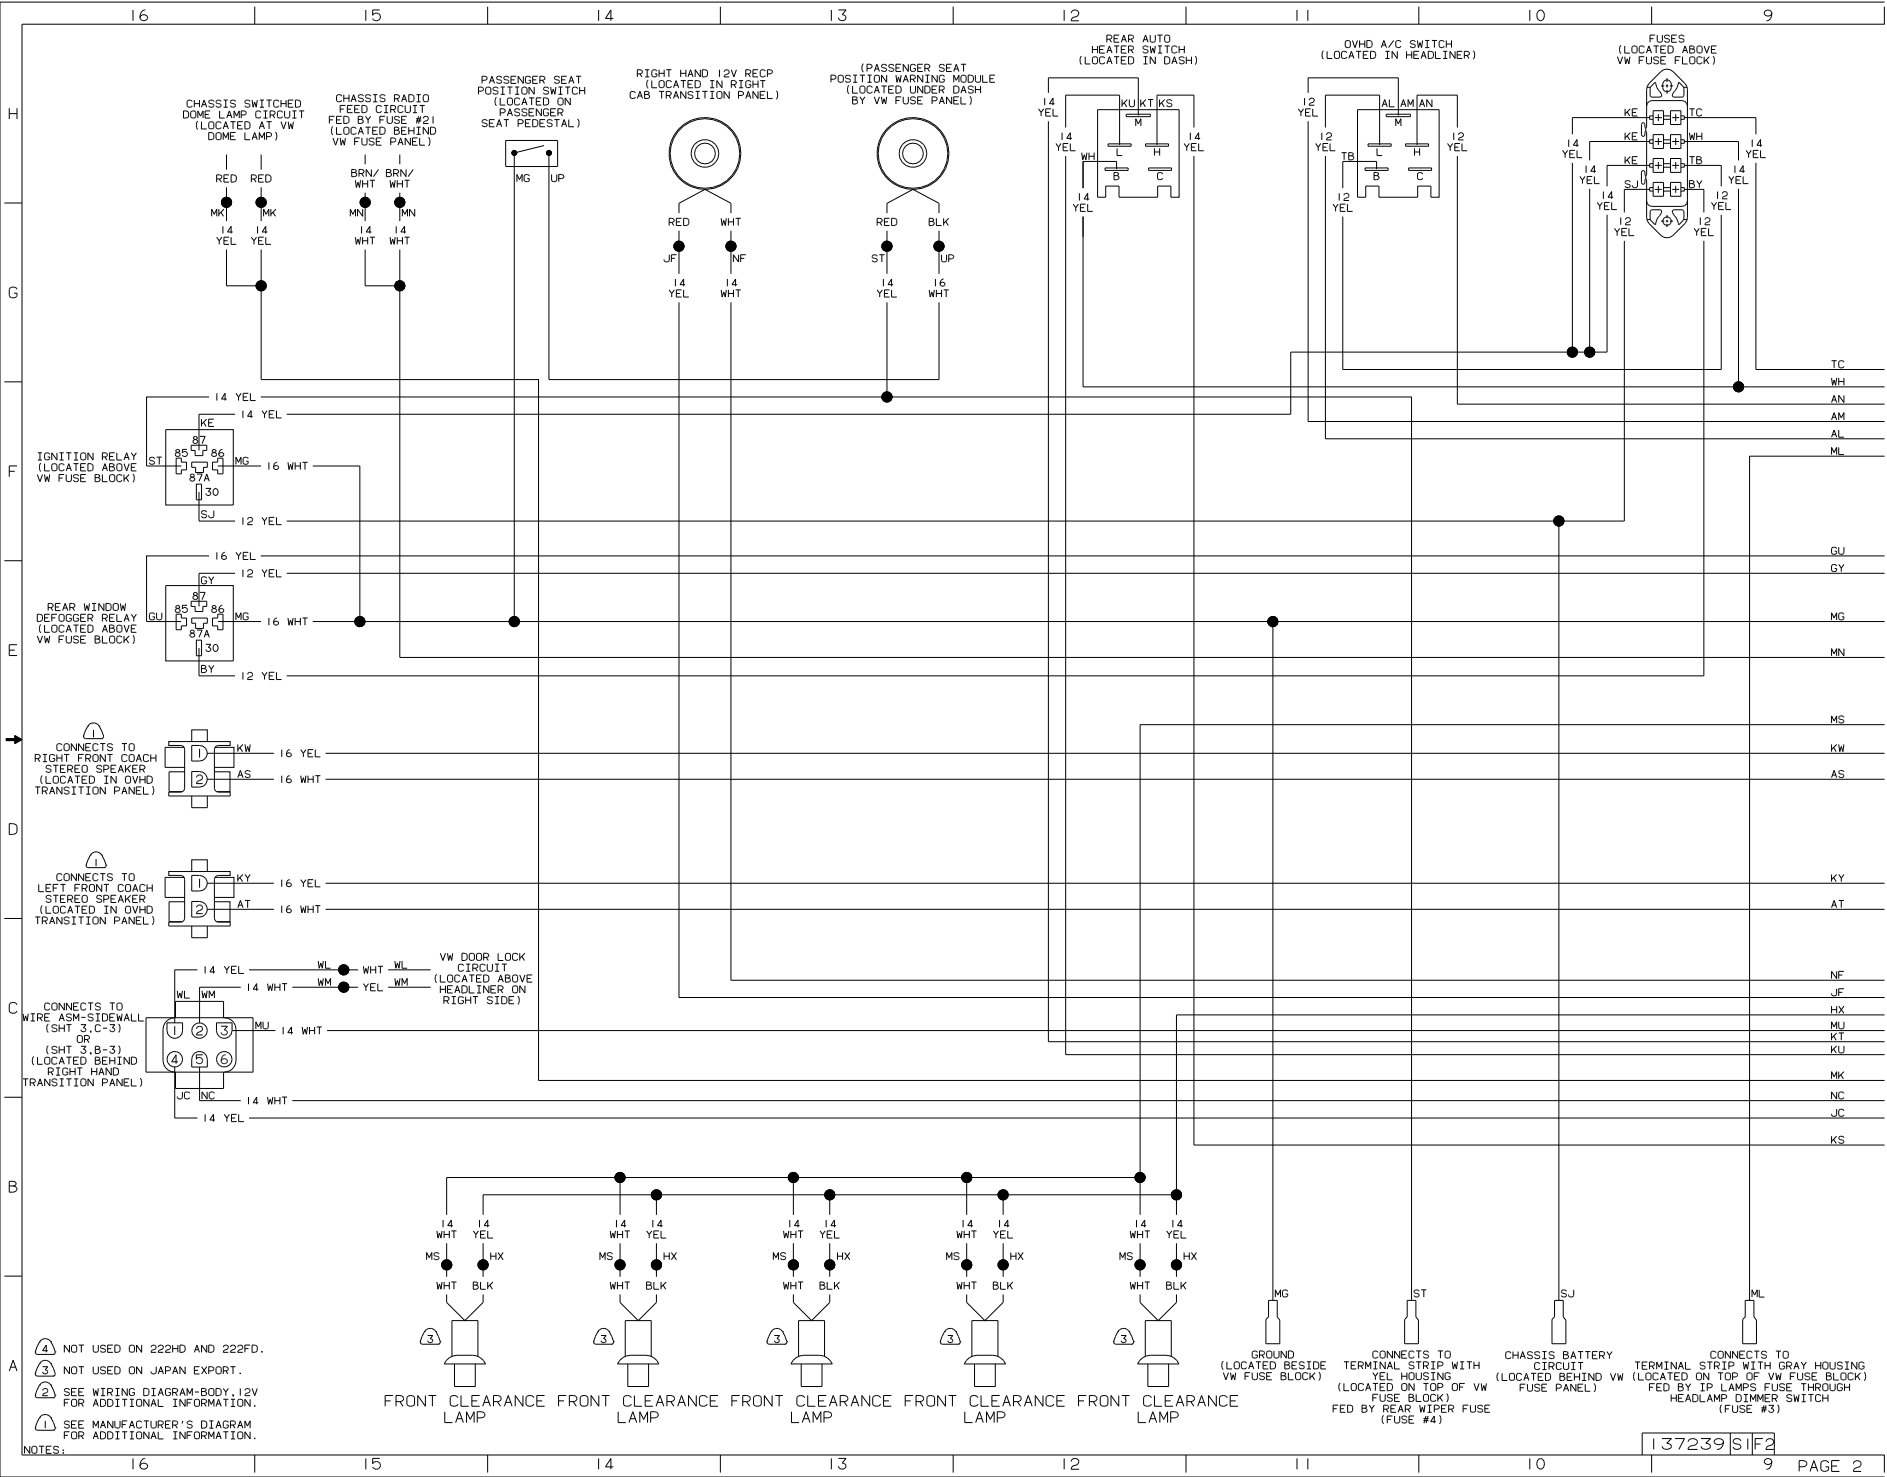 


 - NOTES:
- ④ NOT USED ON 222HD AND 222FD.
 - ③ NOT USED ON JAPAN EXPORT.
 - ② SEE WIRING DIAGRAM-BODY, 12V FOR ADDITIONAL INFORMATION.
 - ① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

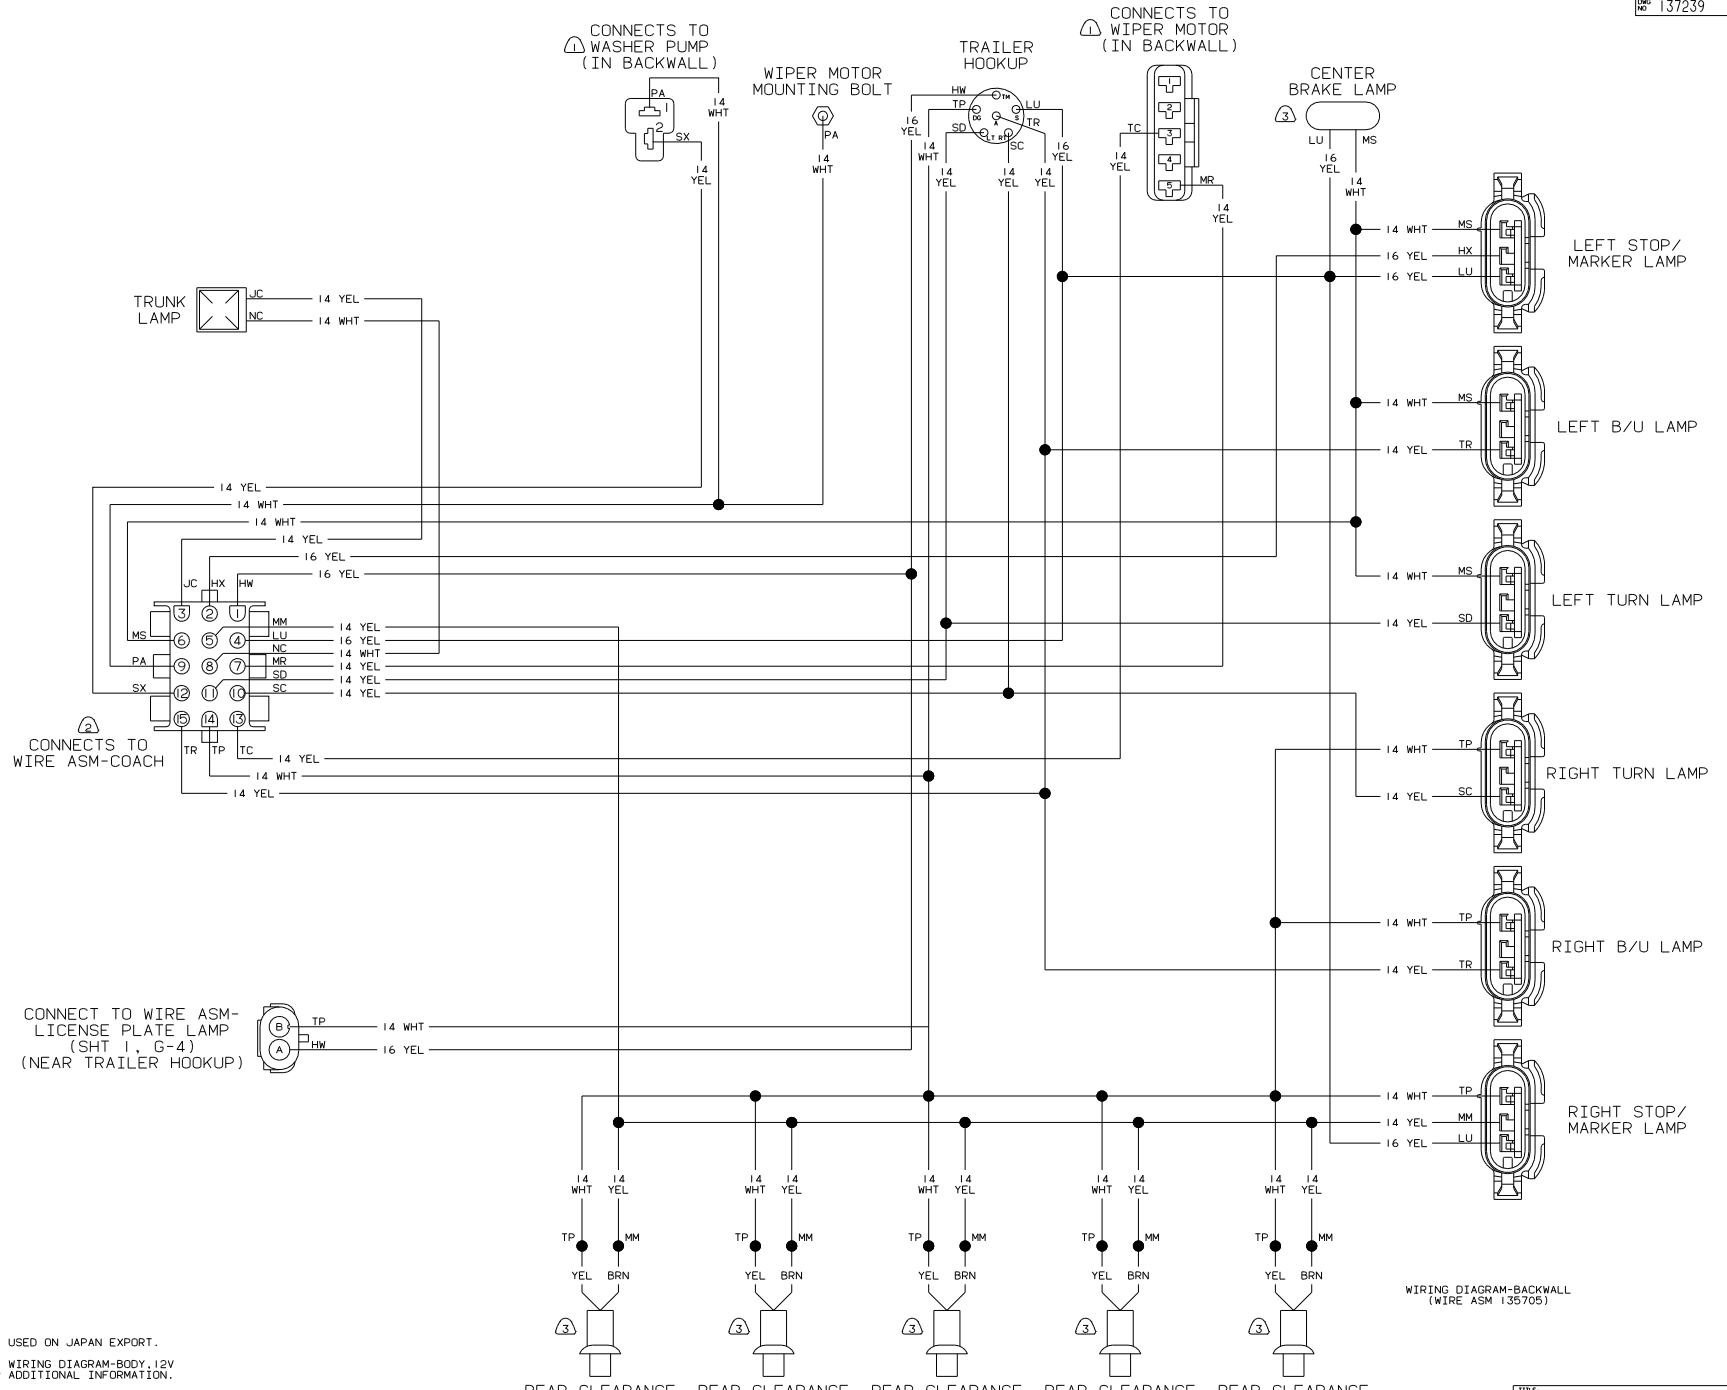


- NOTES:
- ③ NOT USED ON JAPAN EXPORT.
 - ② SEE WIRING DIAGRAM-BODY, 12V FOR ADDITIONAL INFORMATION.
 - ① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

 
WIRING DIAGRAM-BACKWALL (WIRE ASM 135705)

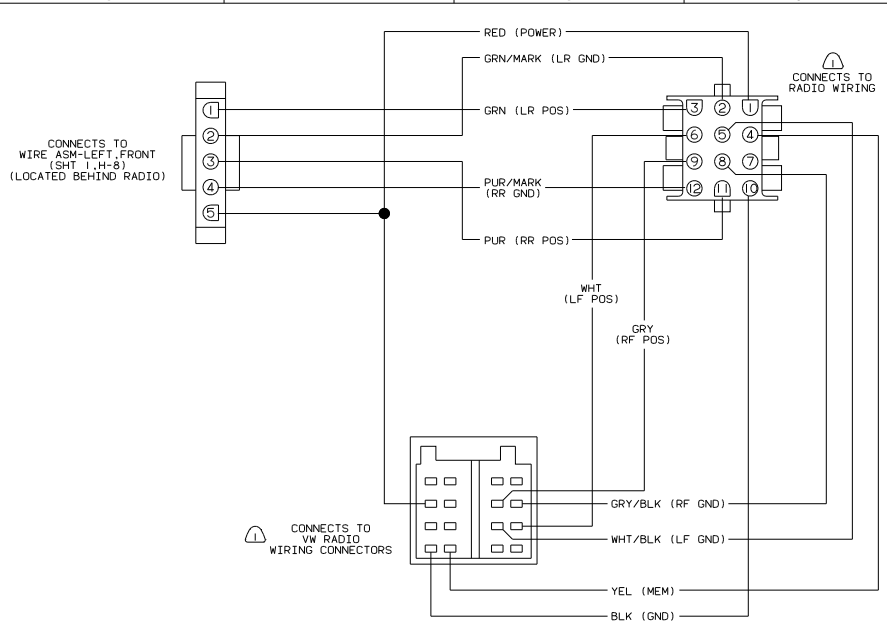

 
WIRING DIAGRAM-ADAPTER,RADIO
(WIRE ASM 114365-02)

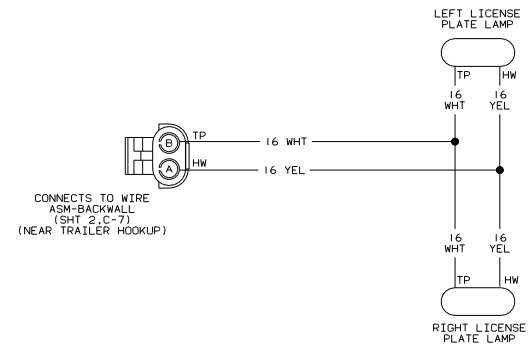

 
WIRING DIAGRAM LICENSE PLATE LAMPS
(WIRE ASM 113731-02 US/CA)
(WIRE ASM-113731-01 JAPAN EXPORT)

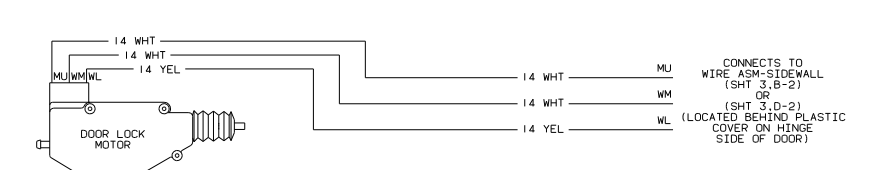

 WIRING DIAGRAM-POWER LOCK ENTRANCE
(WIRE ASM 93057-04)

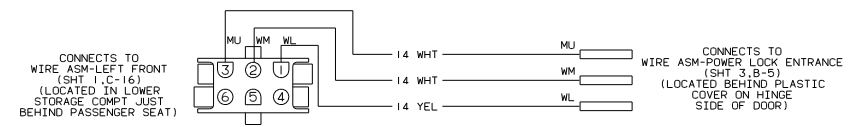

 WIRING DIAGRAM-SIDEWALL
(WIRE ASM 135846-01)
222HD & 222FD ONLY

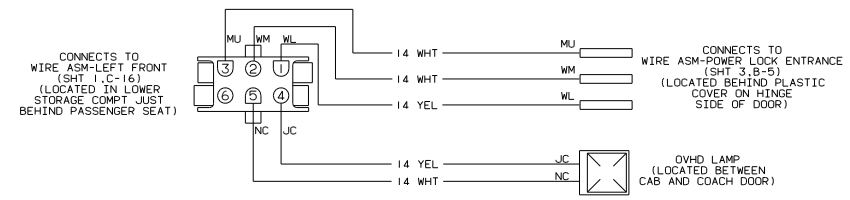

WIRING DIAGRAM-SIDEWALL
(WIRE ASM 135846-02)
2220D ONLY

NOTES: SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.