



DANGER

 
Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


CONNECTS TO WIRE ASM-ADAPTER, RADIO (SHT 3, H-8) (LOCATED BEHIND RADIO)

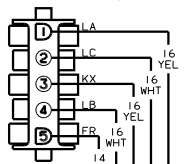

 
CONNECTS TO OVHD A/C (LOCATED IN FRONT CAB OVHD)



















CONNECTS TO REAR WINDOW DEFOGGER SWITCH

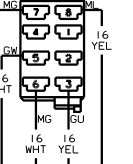 

CONNECTS TO REAR WIPER/WASHER SWITCH

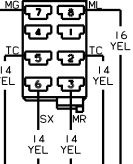 



CONNECTS TO AUX START SWITCH

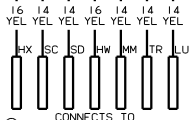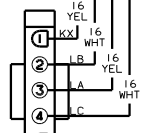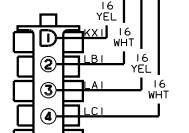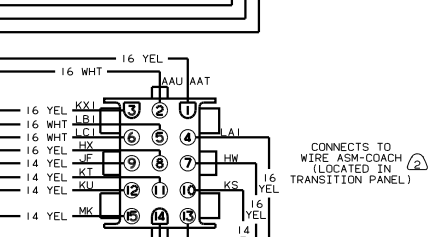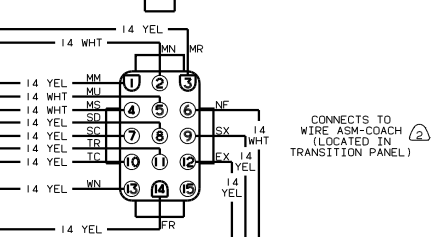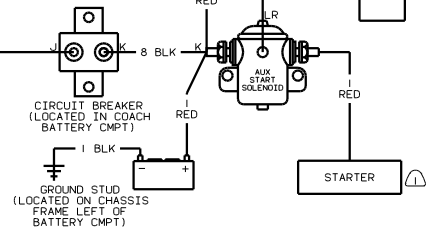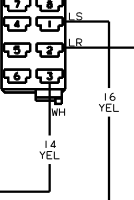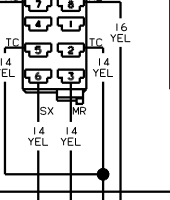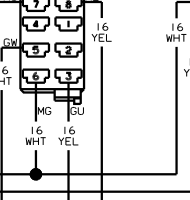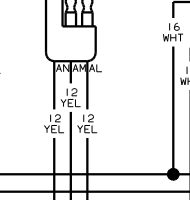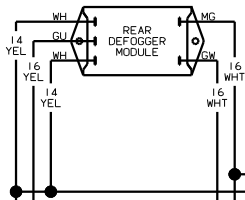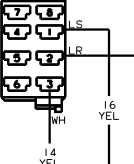                

WIRING DIAGRAM-LEFT, FRONT (WIRE ASM 135730)


DATE		UNDESIGNED TOLERANCES ARE:		01 200-SER	
DATE	SCALE	DATE	ONE-PLACE (X.01)	DATE	MATERIAL
DATE	SCALE	DATE	TWO-PLACE (X.00)	DATE	
DATE	SCALE	DATE	THREE-PLACE (X.000)	DATE	
DATE	SCALE	DATE	FOUR-PLACE (X.0000)	DATE	
DATE	SCALE	DATE	FIVE-PLACE (X.00000)	DATE	
DATE	SCALE	DATE	SIX-PLACE (X.000000)	DATE	
DATE	SCALE	DATE	SEVEN-PLACE (X.0000000)	DATE	
DATE	SCALE	DATE	EIGHT-PLACE (X.00000000)	DATE	
DATE	SCALE	DATE	NINE-PLACE (X.000000000)	DATE	
DATE	SCALE	DATE	TEN-PLACE (X.0000000000)	DATE	
DATE	SCALE	DATE	ELEVEN-PLACE (X.00000000000)	DATE	
DATE	SCALE	DATE	TWELVE-PLACE (X.000000000000)	DATE	
DATE	SCALE	DATE	THIRTEEN-PLACE (X.0000000000000)	DATE	
DATE	SCALE	DATE	FOURTEEN-PLACE (X.00000000000000)	DATE	
DATE	SCALE	DATE	FIFTEEN-PLACE (X.000000000000000)	DATE	
DATE	SCALE	DATE	SIXTEEN-PLACE (X.0000000000000000)	DATE	
DATE	SCALE	DATE	SEVENTEEN-PLACE (X.00000000000000000)	DATE	
DATE	SCALE	DATE	EIGHTEEN-PLACE (X.000000000000000000)	DATE	
DATE	SCALE	DATE	NINETEEN-PLACE (X.0000000000000000000)	DATE	
DATE	SCALE	DATE	TWENTY-PLACE (X.00000000000000000000)	DATE	

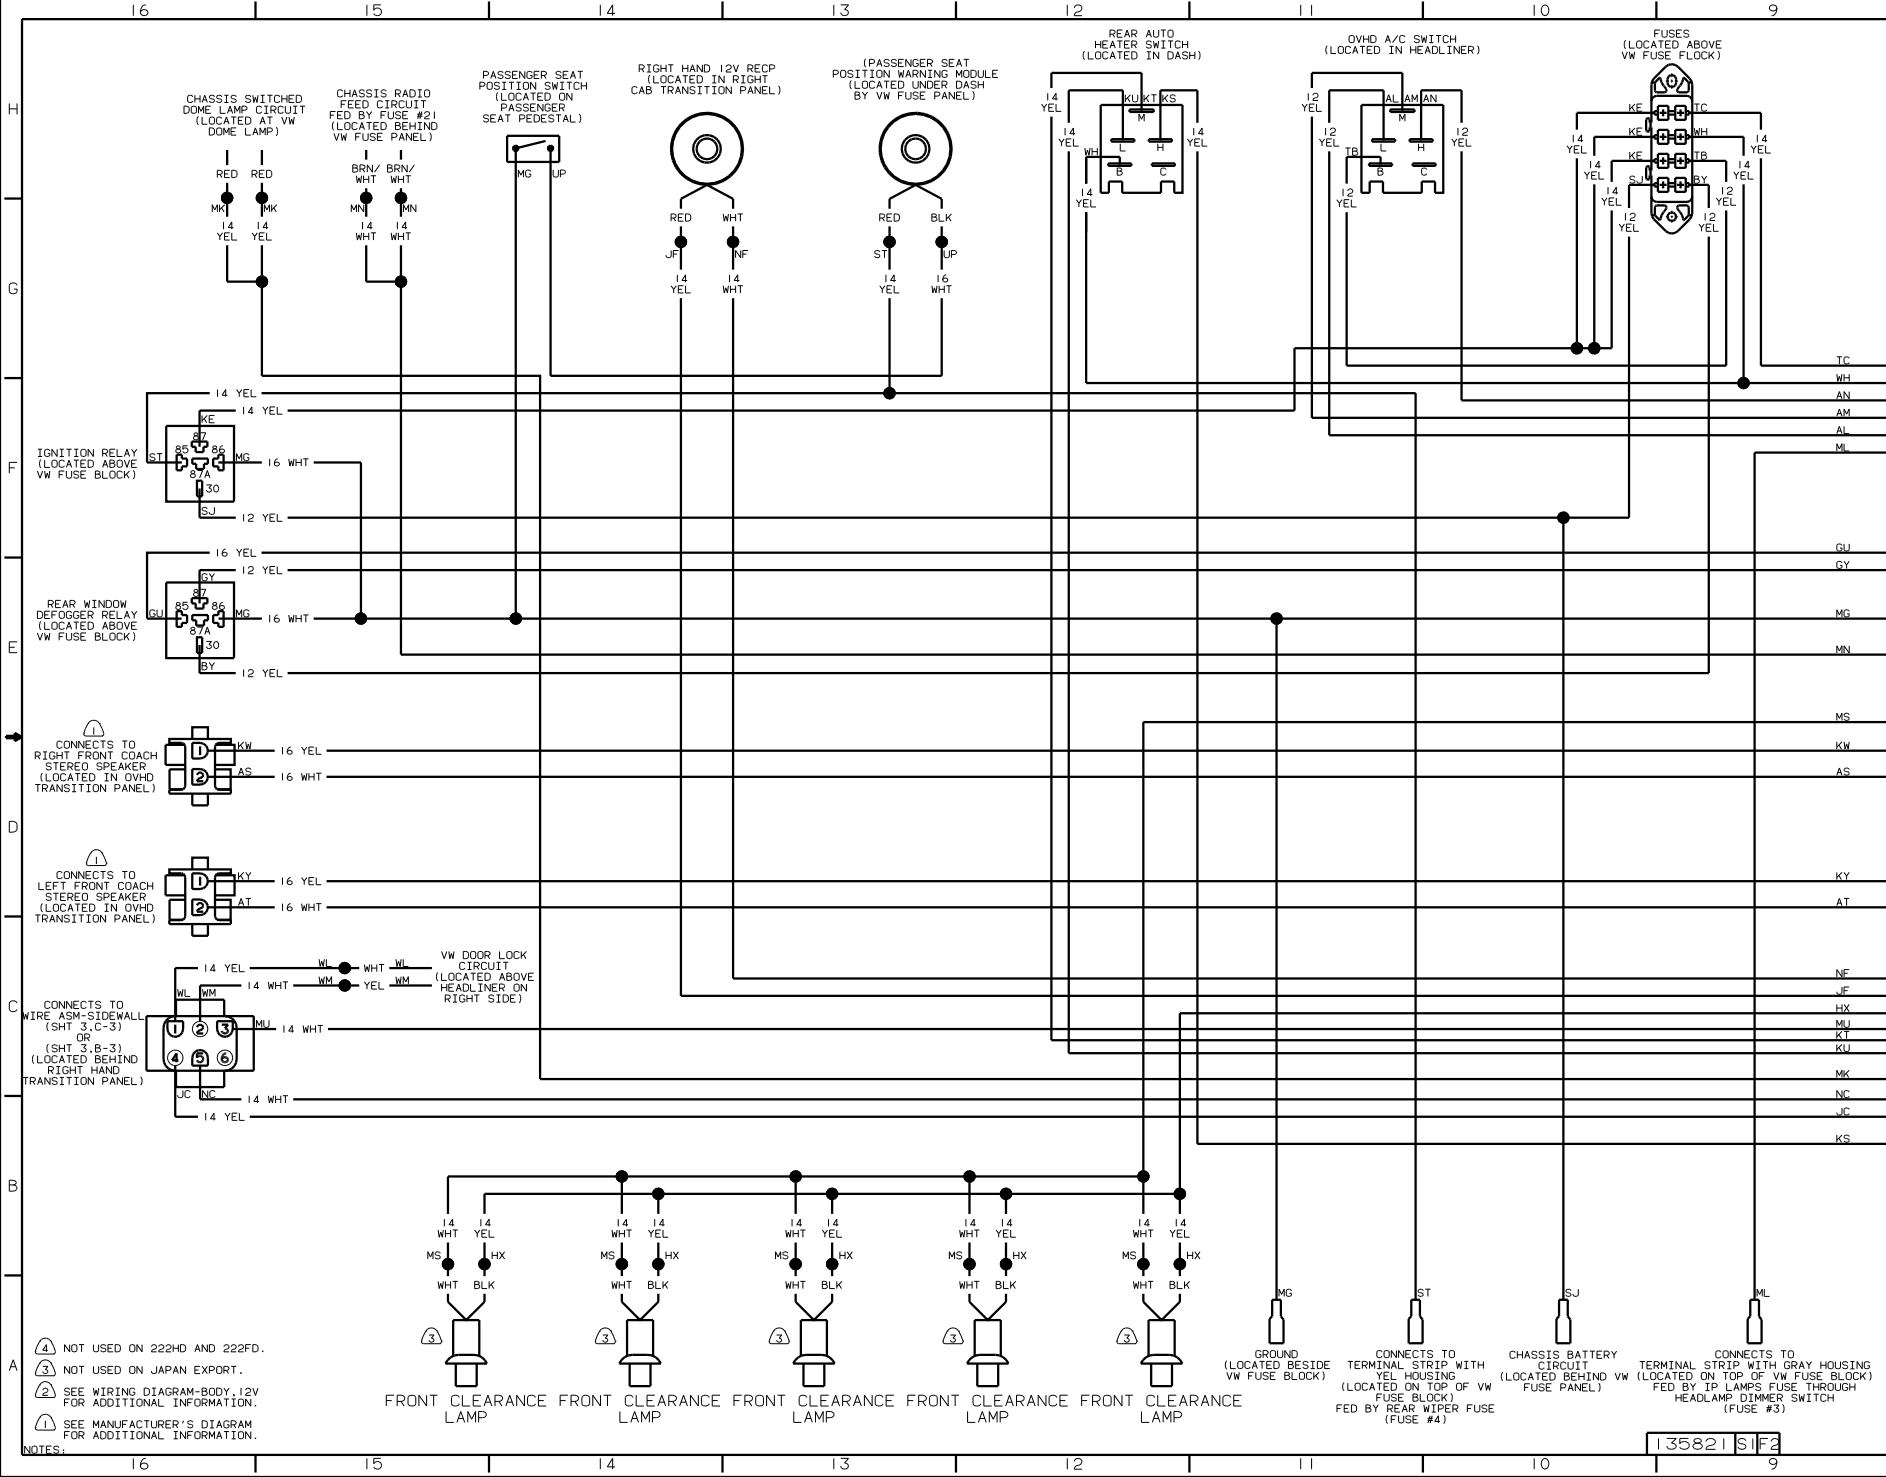 

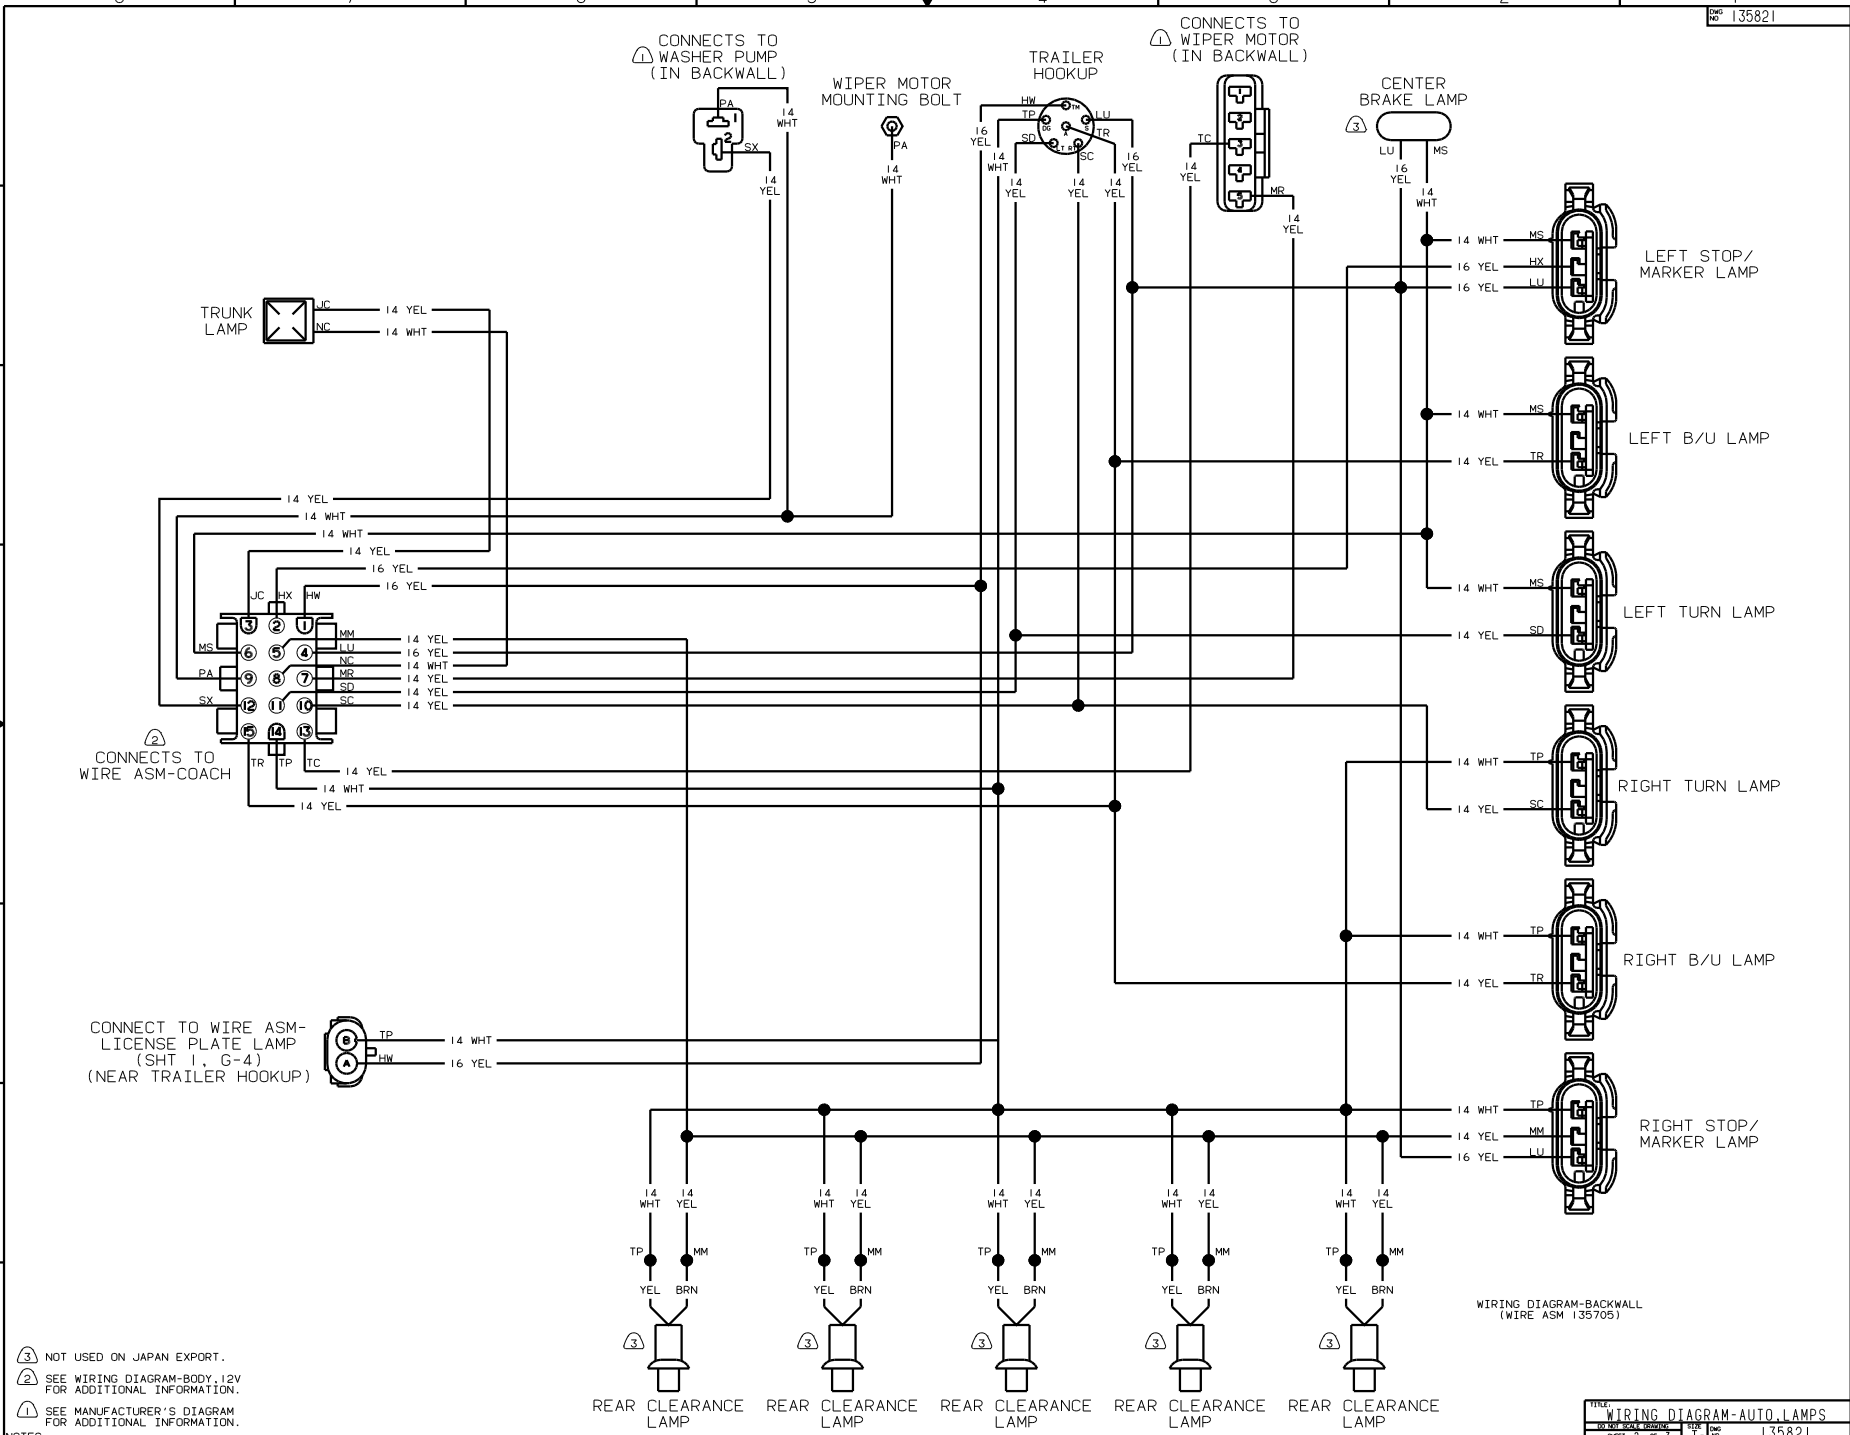 


WIRING DIAGRAM-BACKWALL (WIRE ASM 135705)

 
- NOTES:
- ③ NOT USED ON JAPAN EXPORT.
 - ② SEE WIRING DIAGRAM-BODY.12V FOR ADDITIONAL INFORMATION.
 - ① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

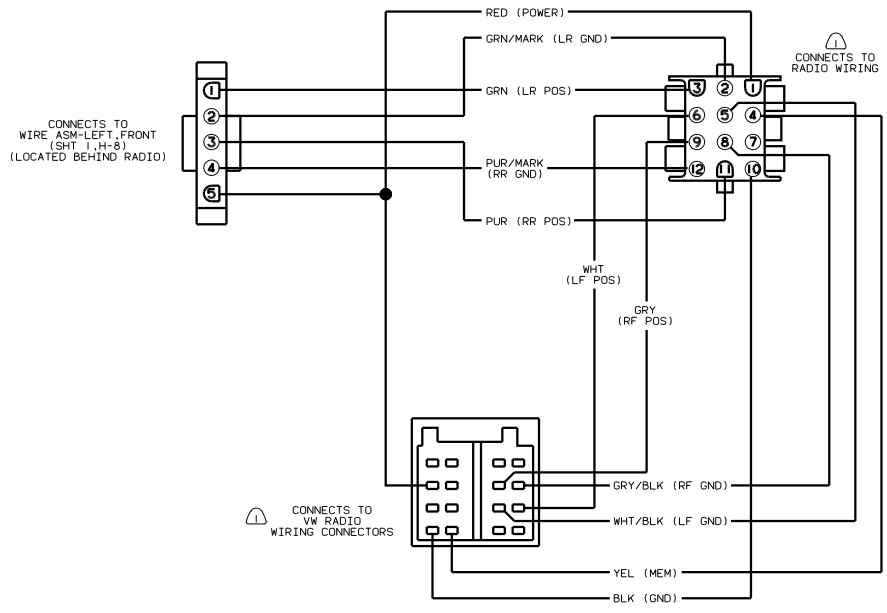

 
WIRING DIAGRAM-ADAPTER,RADIO
(WIRE ASM 114365-02)

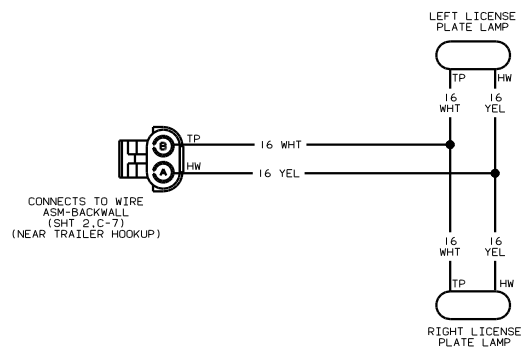

 
WIRING DIAGRAM LICENSE PLATE LAMPS
(WIRE ASM 113731-02 US/CA)
(WIRE ASM-113731-01 JAPAN EXPORT)

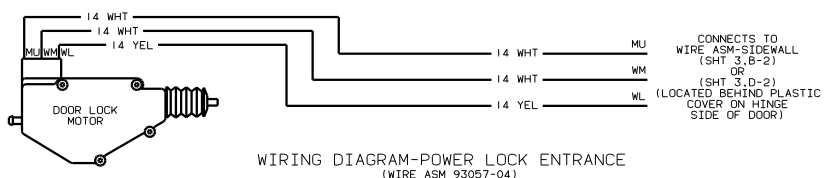

 WIRING DIAGRAM-POWER LOCK ENTRANCE
(WIRE ASM 93057-04)

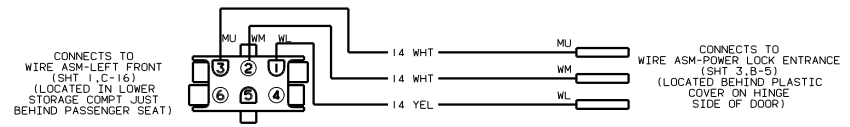

 WIRING DIAGRAM-SIDEWALL
(WIRE ASM 135846-01)
222HD & 222FD ONLY

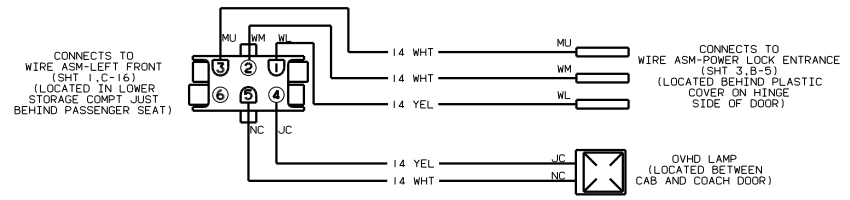

WIRING DIAGRAM-SIDEWALL
(WIRE ASM 135846-02)
2220D ONLY

NOTES: SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.