




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

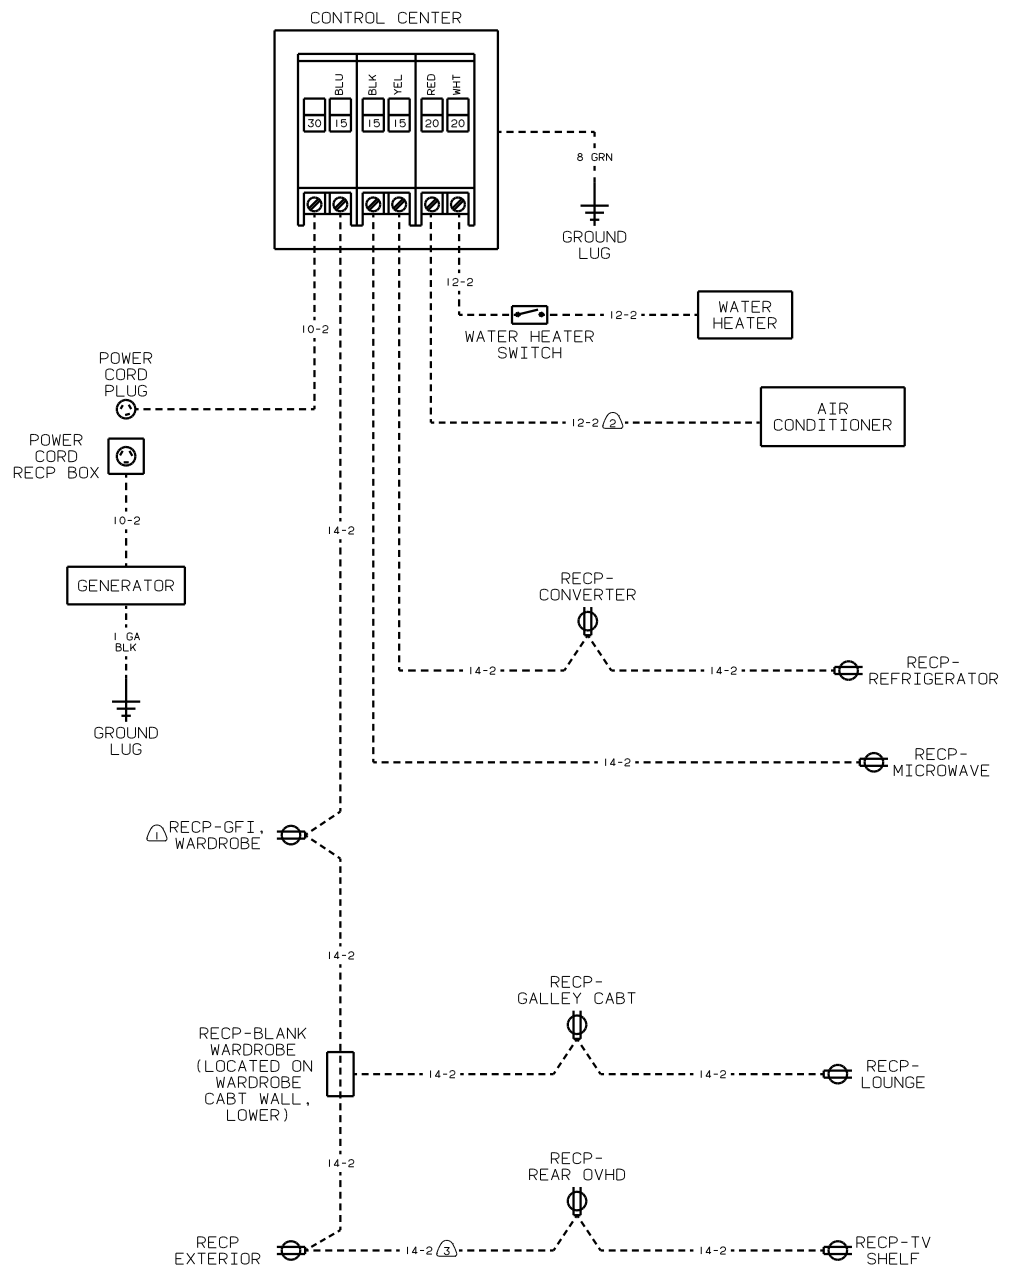

- NOTES:
- ③ WIRE ROUTED THRU SIDEWALL.
  - ② WIRE ROUTED THRU ROOF.
  - ① ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT CIRCUIT INTERRUPT PROTECTED.

- ②65 CODES/STANDARDS-CSA/CMVSS
- ①B1 CODES/STANDARDS USA
- ①20 ELECTRICAL SYSTEM 30 AMP

①20 ①B1 ②65

**WINNEBAGO** 01 222HD

DATE	UNDESIGNED TOLERANCES ARE	REVISION
DATE	ONE PLACE (18.21)	
DATE	TWO PLACE (18.20)	
DATE	ANGLE	
DATE	TRIPPLE ANGLE	
DATE	INDUCTOR	

LANDING  
 DIA 7 SCALE: NONE  
 ALL DIMENSIONS ARE IN MILLIMETERS

**WIRING DIAGRAM-BODY 110V**

SHEET 1 OF 1  
 REF: 131747 1  
 135689