




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

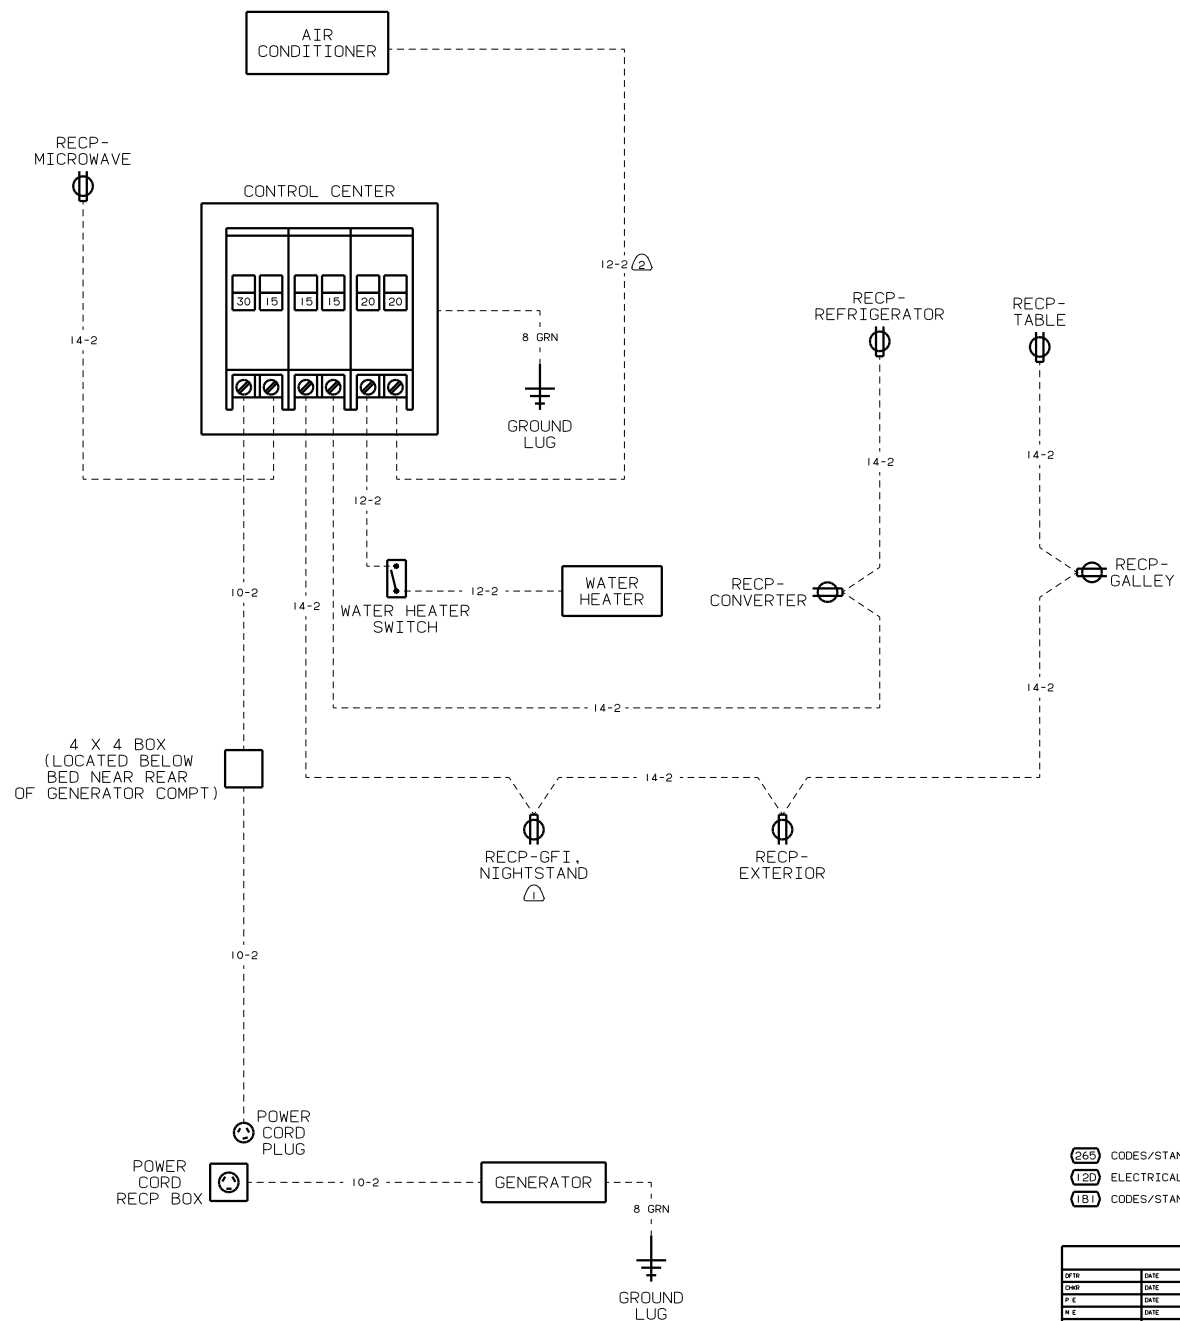

NOTES:
 (2) WIRE ROUTED THRU ROOF.
 (1) ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT CIRCUIT INTERRUPT PROTECTED.

- (265) CODES/STANDARDS-CSA/CMVSS
- (12D) ELECTRICAL SYSTEM 30 AMP
- (1B1) CODES/STANDARDS USA

(12D) (1B1) (265)

WINNEBAGO 01 222FD

OF IN	DATE	UNSPECIFIED TOLERANCES ARE:	INVERTAL
CHP	DATE	WHOLE OR 1/16"	
D/E	DATE	ONE-PLACE (1/32)"	
D/E	DATE	TWO-PLACE (1/64)"	
D/E	DATE	ANGLE	
CONP	DATE	THRU HOLE PROJECTION	

LAYOUT NO. --- TITLE: **WIRING DIAGRAM-BODY 110V**
 DIA # SCALE: NONE TO THE SCALE SHOWN FIG 16
 ALL DIMENSIONS ARE IN MILLIMETERS SHEET 1 OF 1 I.E. NO 135985