



**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.



CONNECTS TO WIRE ASM-BACKWALL (LOCATED BEHIND CIRCUIT BREAKERS)

CONNECTS TO WIRE ASM-WATER TANK (LOCATED BELOW RIGHT DINETTE SEAT)

CONNECTS TO WIRE ASM-BLACK HOLDING (LOCATED BELOW WARDROBE CABT)


CONNECTS TO WIRE ASM- GREY HOLDING (LOCATED BELOW GALLEY CABT)

CONNECTS TO MONITOR PANEL (LOCATED IN LH TRANSITION PANEL)

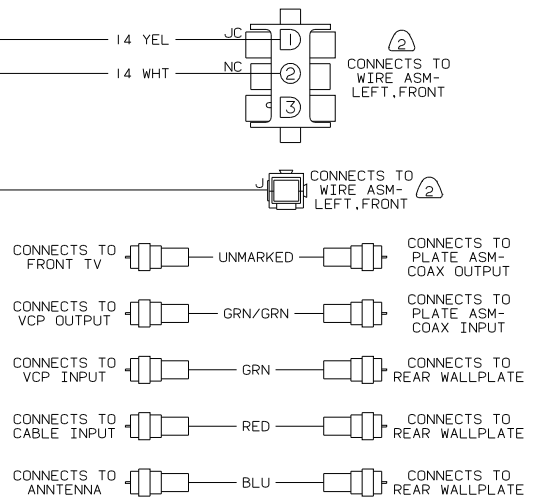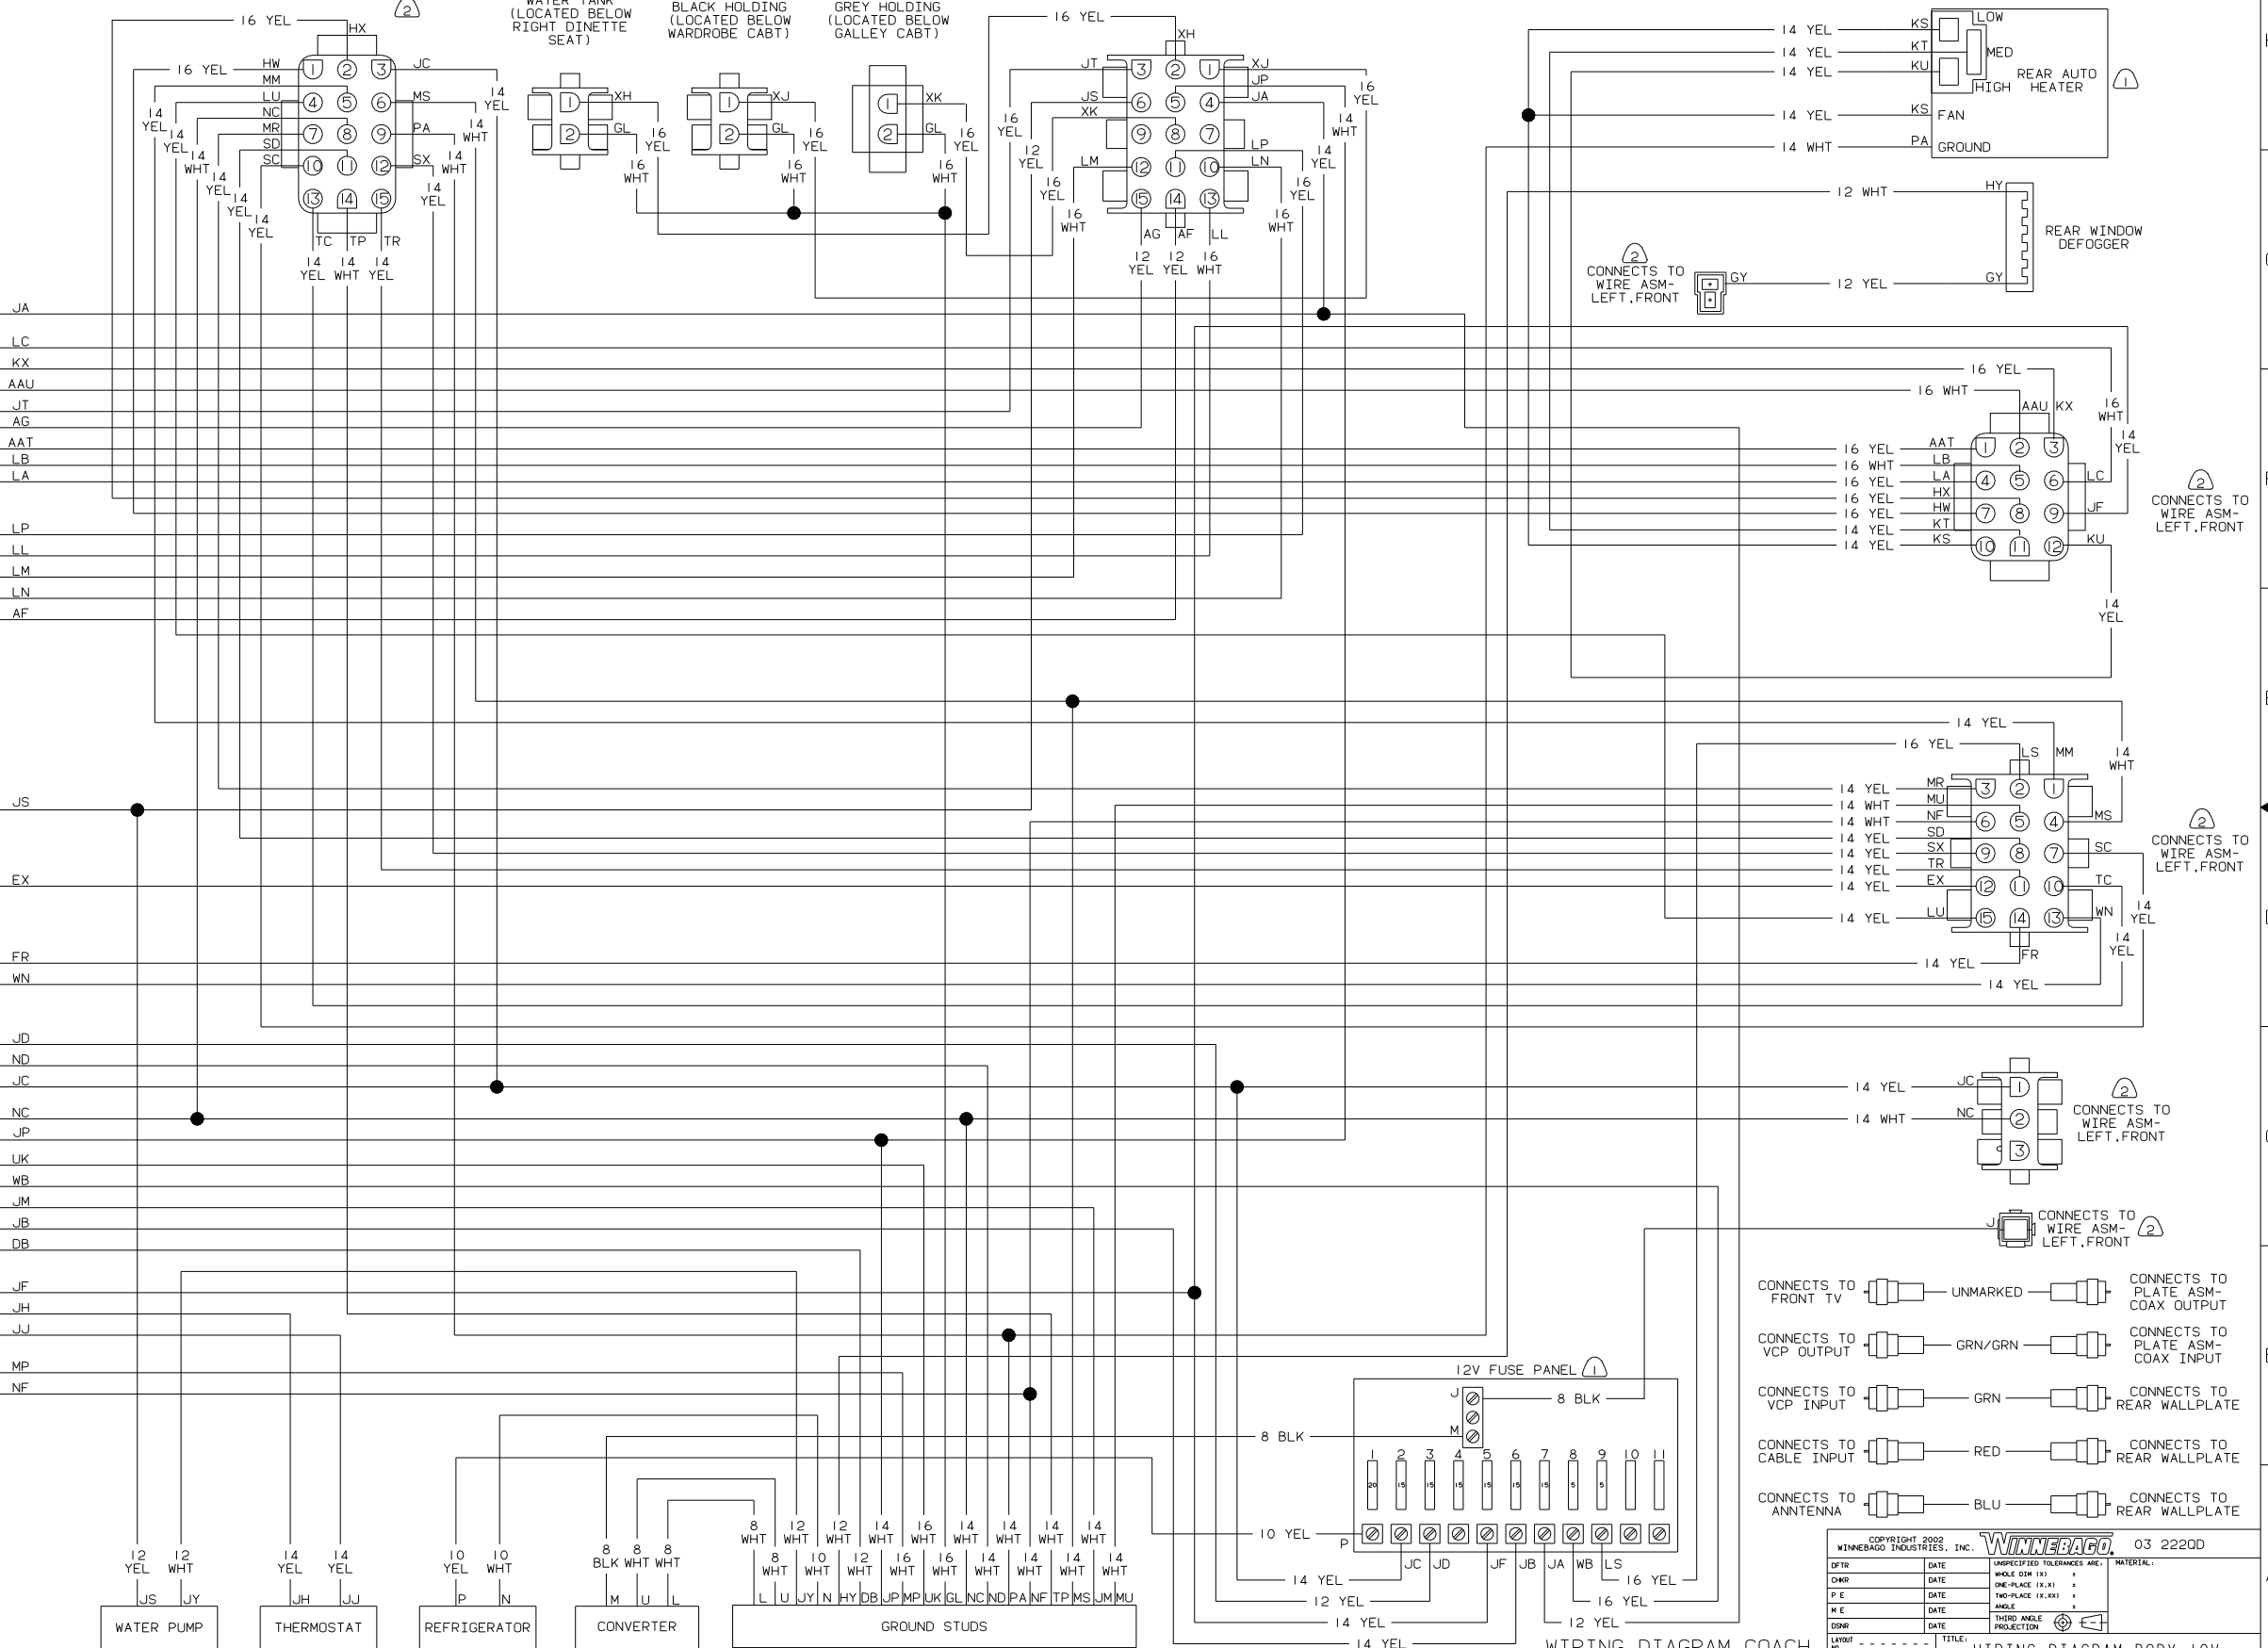


COPYRIGHT 2002 WINNEBAGO INDUSTRIES, INC. WINNEBAGO 03 2220D	
DATE	UNSPECIFIED TOLERANCES ARE:
DWTR	ANGLE DIM (X) +
P E	ONE-PLACE (X, X) +
M E	TWO-PLACE (X, X) +
DATE	ANGLE
DATE	THIRD ANGLE PROJECTION
DATE	
TITLE: WIRING DIAGRAM-BODY, 12V	
LAYOUT NO	SIZE
DIA #	SCALE: NOTE
DO NOT SCALE DRAWING	SIZE
ALL DIMENSIONS ARE IN MILLIMETERS	SHEET 1 OF 2
	NO 141376

WIRING DIAGRAM COACH (WIRE ASM 141294)

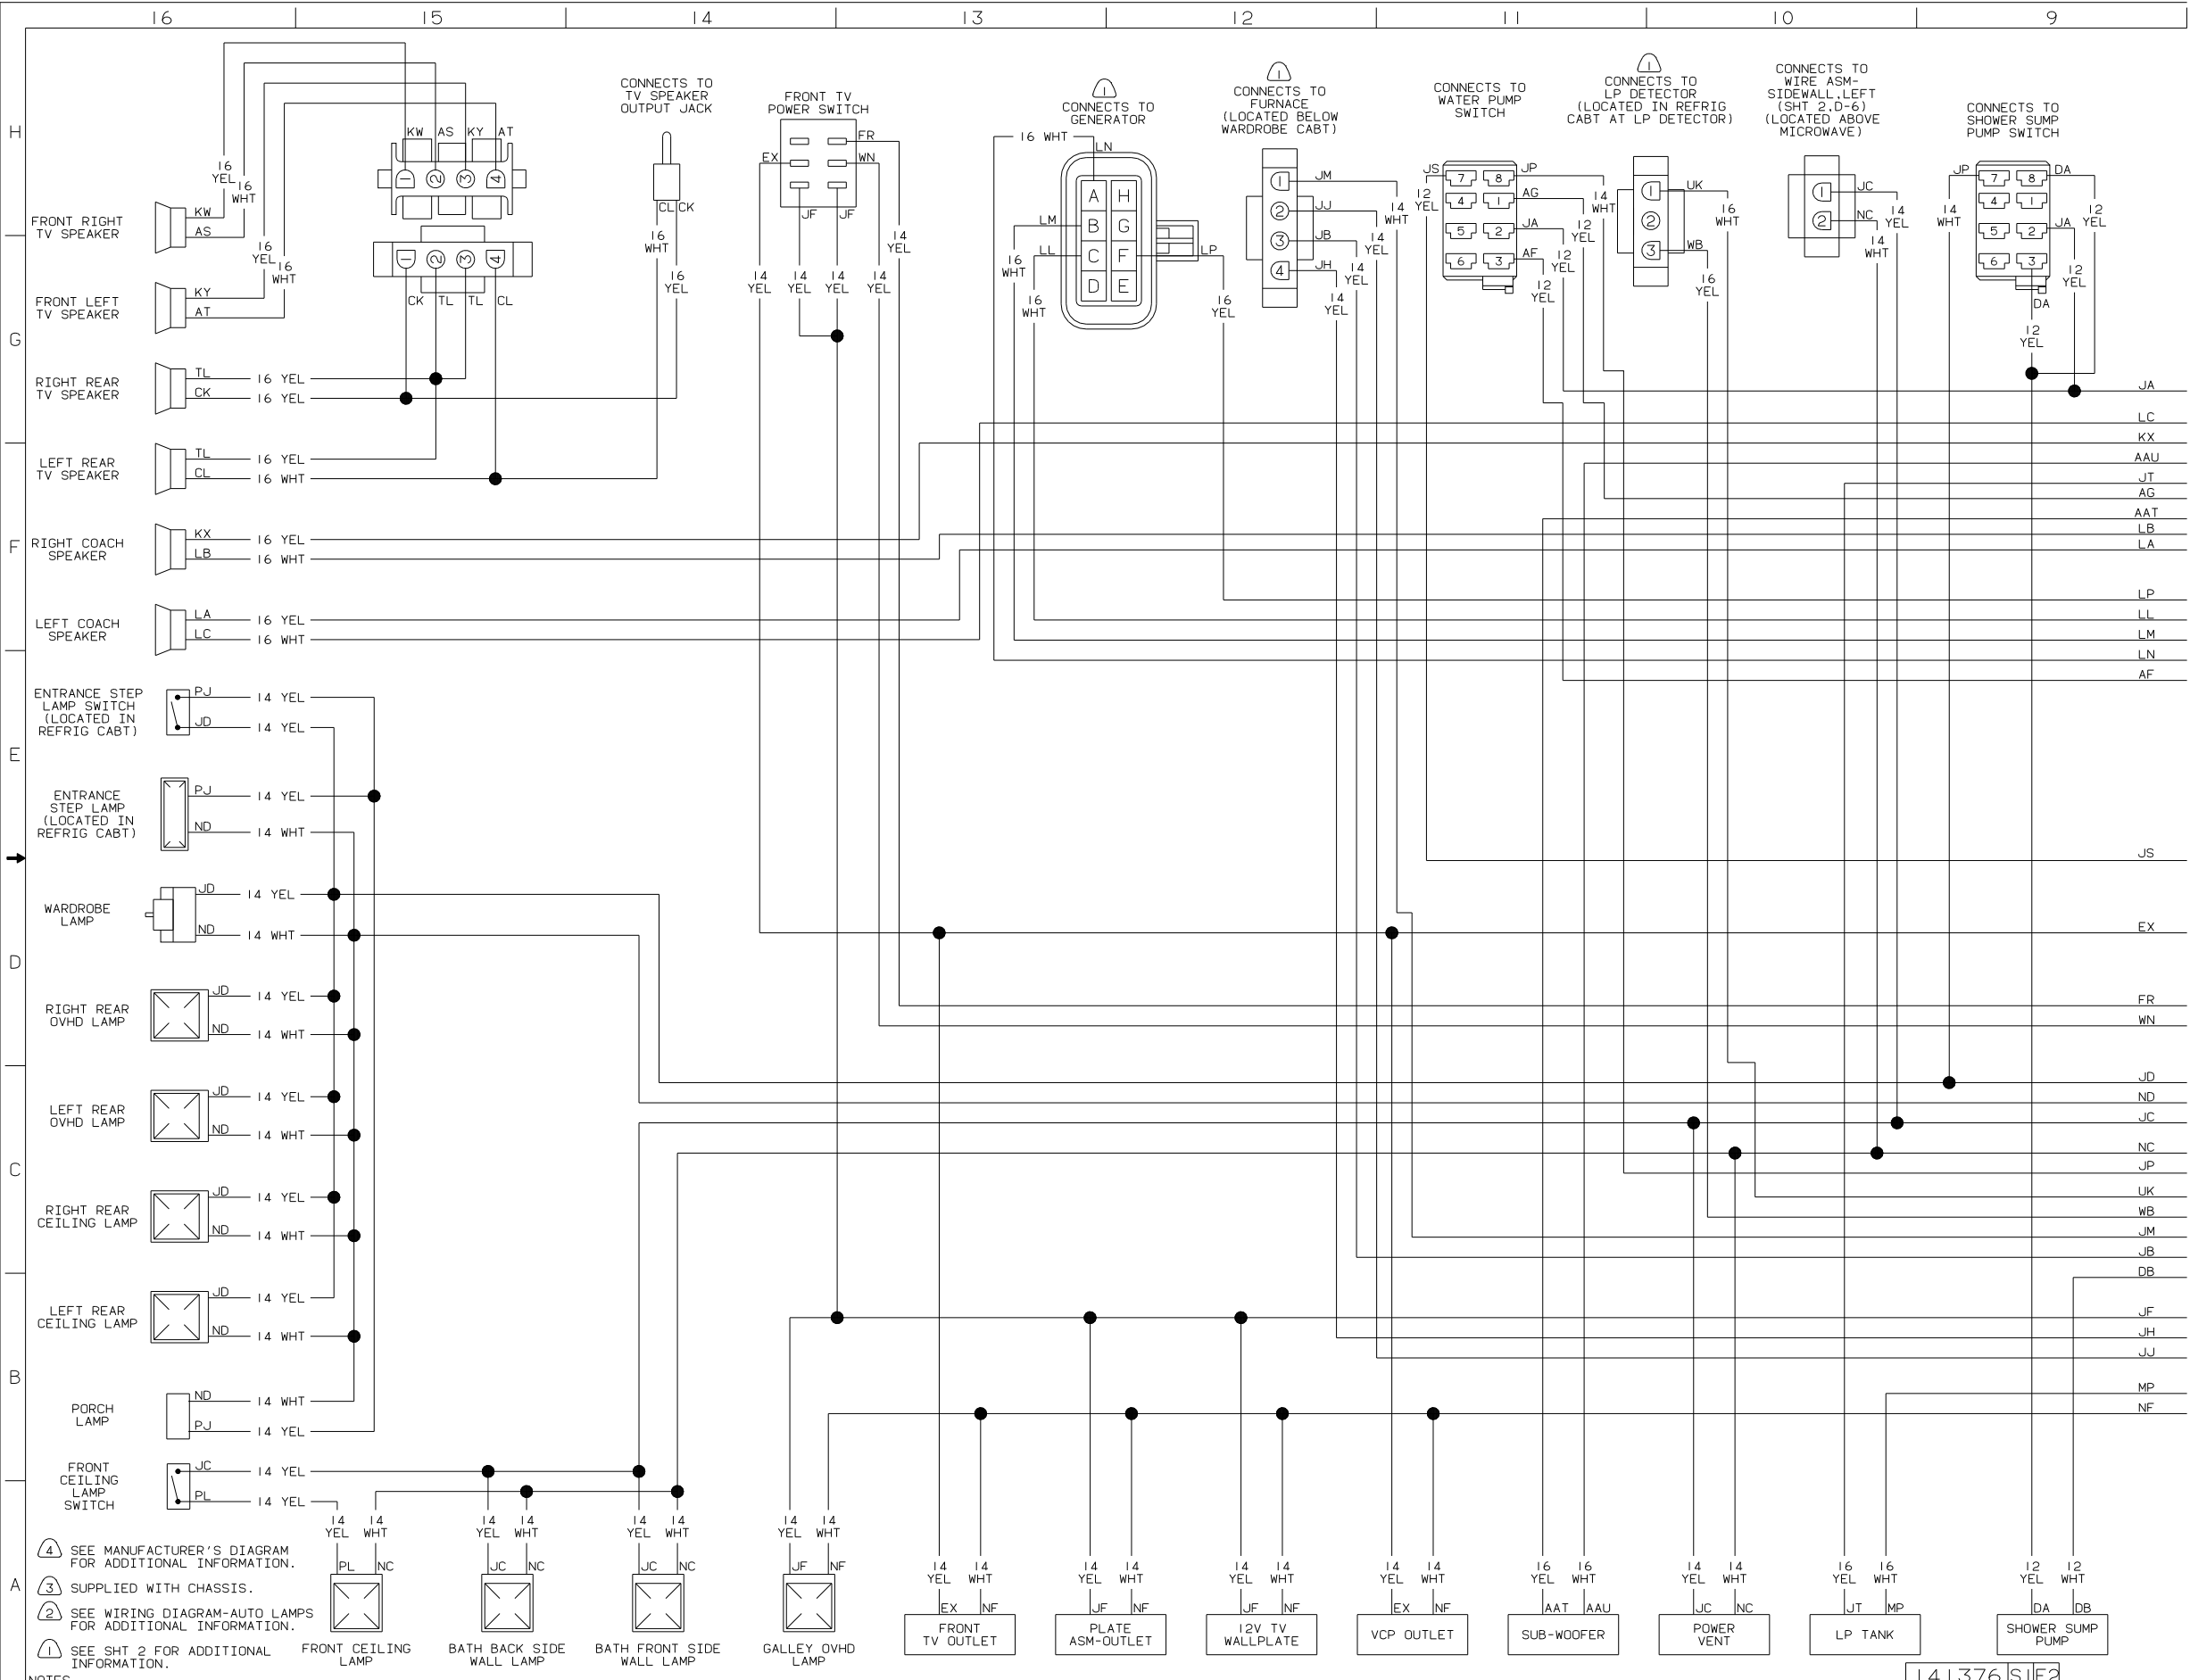

- ④ SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.  
 ③ SUPPLIED WITH CHASSIS.  
 ② SEE WIRING DIAGRAM-AUTO LAMPS FOR ADDITIONAL INFORMATION.  
 ① SEE SHT 2 FOR ADDITIONAL INFORMATION.

 NOTES:



WIRING DIAGRAM-ROOF,FRONT  
(WIRE ASM 119112)