




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

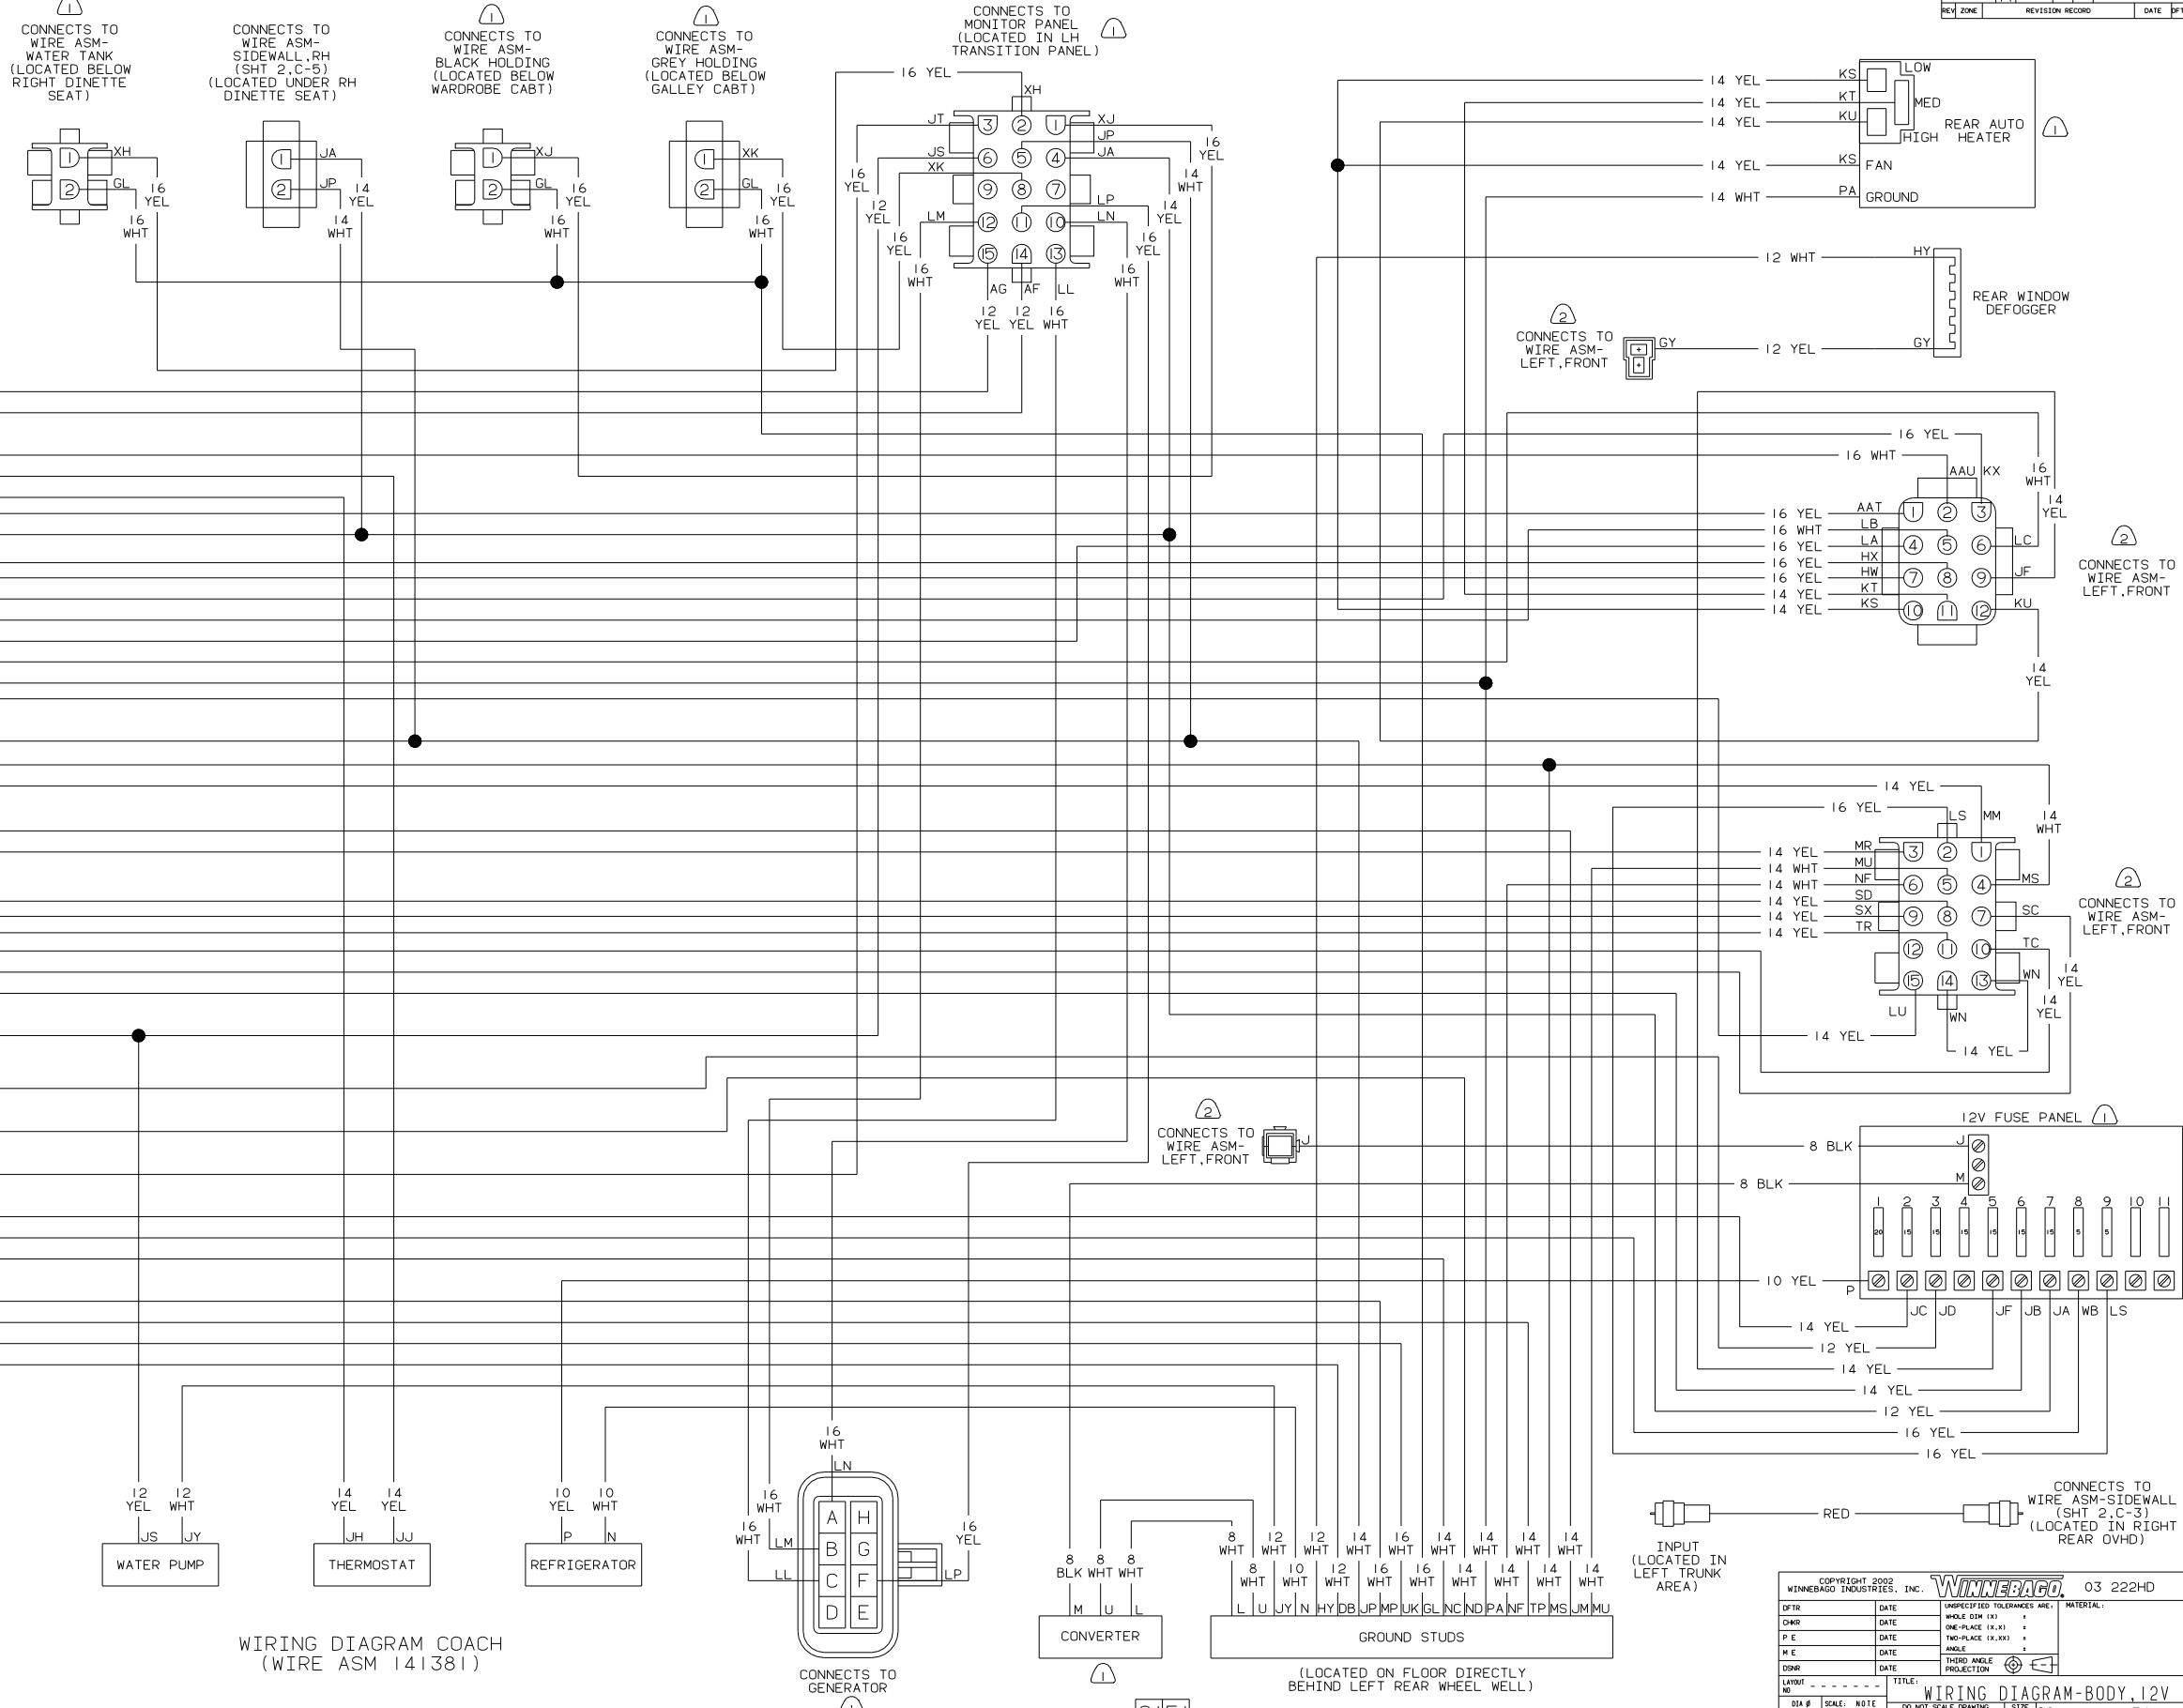

WIRING DIAGRAM COACH (WIRE ASM 141381)

COPYRIGHT 2002 WINNEBAGO INDUSTRIES, INC.		03 222HD	
DTR	DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL:
CHR	DATE	ANGLE DIM (X.X)	+
P E	DATE	ONE-PLACE (X.X)	+
M E	DATE	TWO-PLACE (X.XX)	+
DNR	DATE	ANGLE	+
	DATE	THIRD ANGLE PROJECTION	
LAYOUT NO	TITLE	WIRING DIAGRAM-BODY, 12V	
DIA #	SCALE	DO NOT SCALE DRAWING	SIZE
		SHEET 1 OF 2	NO 141384

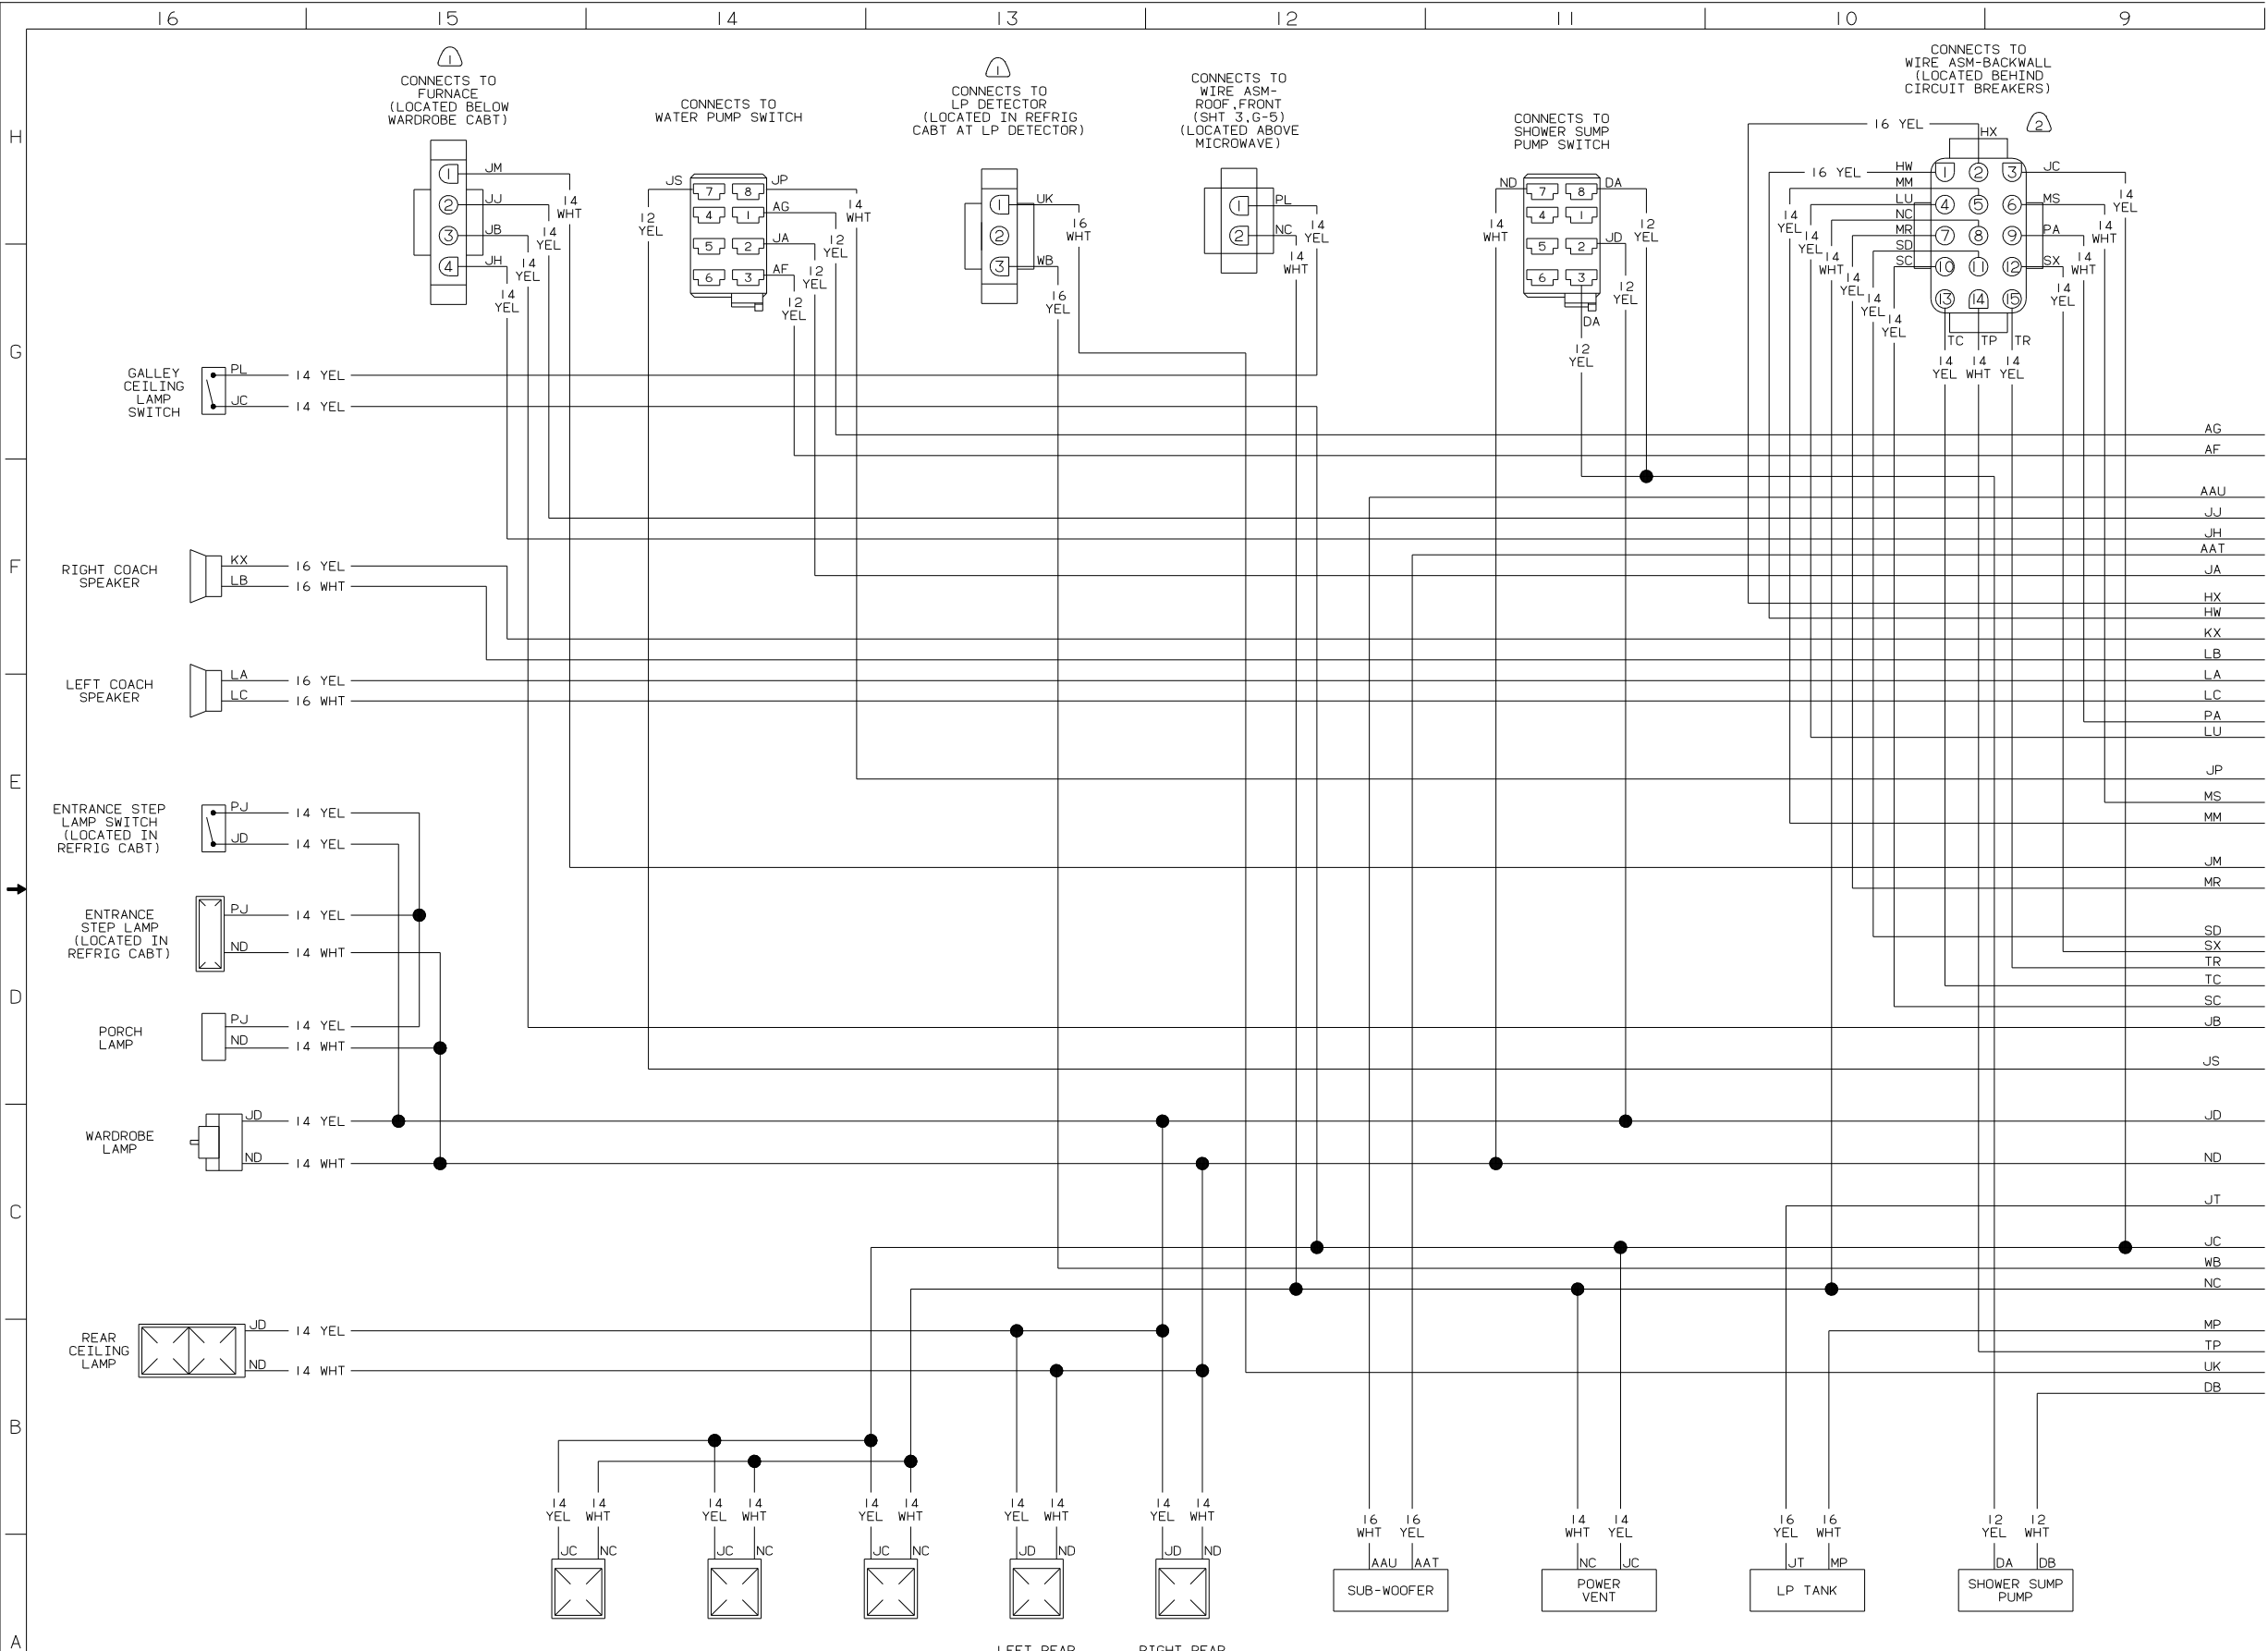

① CONNECTS TO FURNACE (LOCATED BELOW WARDROBE CABT)

CONNECTS TO WATER PUMP SWITCH

 
① CONNECTS TO LP DETECTOR (LOCATED IN REFRIG CABT AT LP DETECTOR)

CONNECTS TO WIRE ASM-ROOF FRONT (SHT. 3, G-5) (LOCATED ABOVE MICROWAVE)


CONNECTS TO SHOWER SUMP PUMP SWITCH

CONNECTS TO WIRE ASM-BACKWALL (LOCATED BEHIND CIRCUIT BREAKERS)

② SEE WIRING DIAGRAM-AUTO LAMPS FOR ADDITIONAL INFORMATION.
 ① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
 NOTES:



WIRING DIAGRAM-ROOF,FRONT
(WIRE ASM 119112)

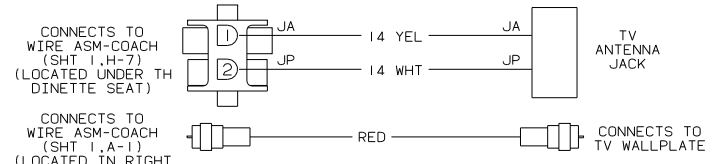

WIRING DIAGRAM-SIDEWALL
(WIRE ASM 111451-03)