






**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

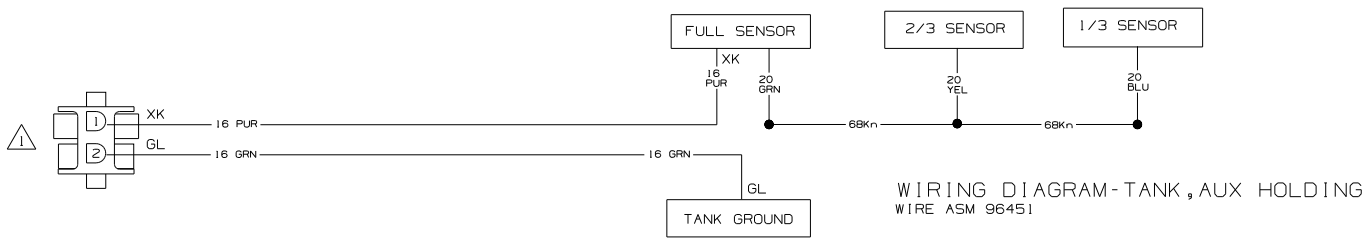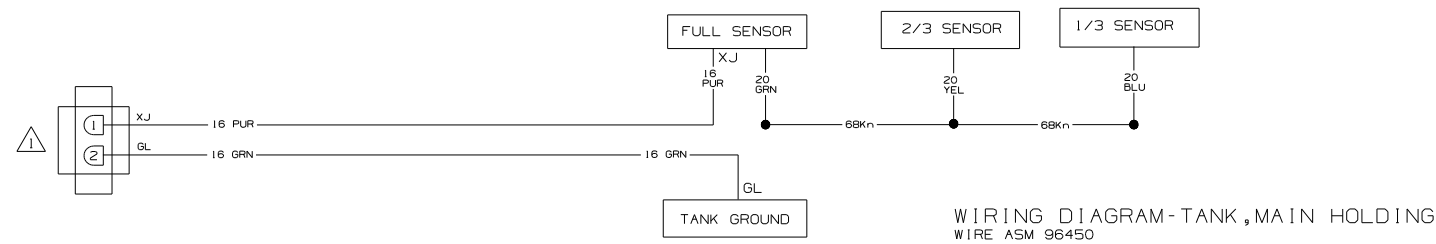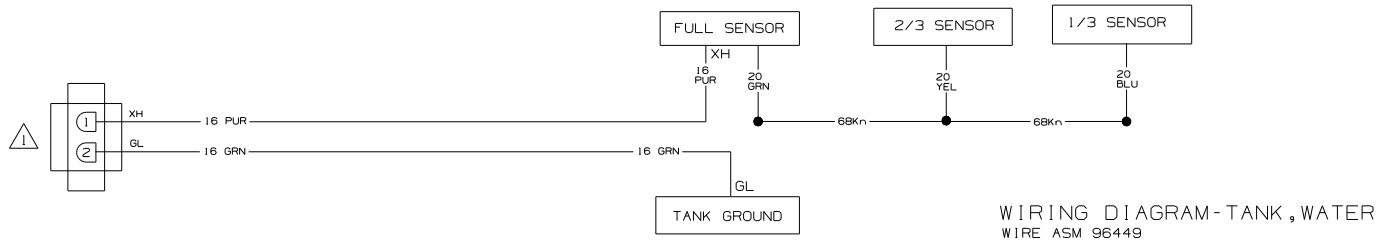

NOTES:  
 SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.

**WINNEBAGO**

QTR	ORIG. DATE
CHR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	FIRST USED
W.E.	03 SERIES
QDR	

UNSPECIFIED TOLERANCES ARE:  
 HOLE DIA (X) +  
 ONE-PLACE (X.X) +  
 TWO-PLACE (X.XX) +  
 ANGLE +

THIRD ANGLE PROJECTION

**DO NOT SCALE DRAWING**

TITLE:  
**WIRING DIAGRAM-HOLDING TANKS**

SHEET | OF | 1 PART NO 110664

REF: 1