


2005 RIALTA SEALANTS CALLOUT SHEET

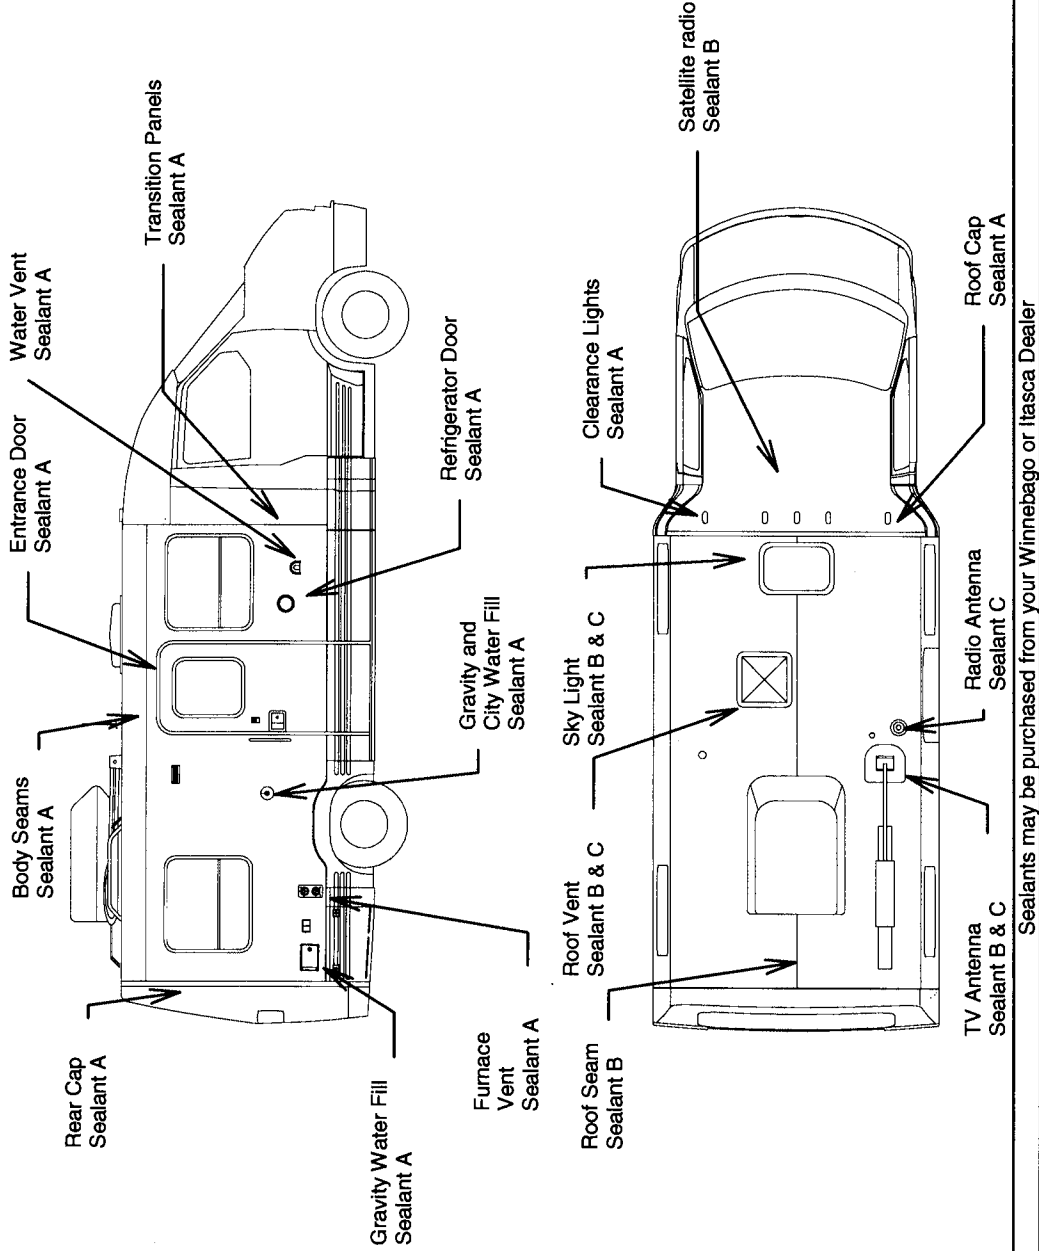

This is only a graphic representation for sealants and does not represent actual component position

Revision A

NOTE: All painted aluminum skin surfaces that have silicone applied too, must be wiped with lacquer thinner. (45704-02) Follow procedure outlined below:


- Wipe area for silicone application with lacquer thinner. (45704-02) Application should wet the surface for at least 5 seconds.
- After the surface is wet wipe excess from the surface with a dry towel
- Allow remaining thinner to flash off, then apply the silicone within 5 minutes of thinner application

*If the motorhome received beige metallic paint scheme, sealant 072889 23-000 should be used in place of A, and sealant 072889-26-000 in place of B.

*If the motorhome received silver metallic paint scheme, sealant 072889-25-000 should be used in place of A, and sealant 072889-27-000 in place of B.

Sealant	Winnebago Part #
A*	072889-22-000
B*	131264-03-01A
C	131264-01-02A

2005 VISTA & SUNSTAR SEALANT CALLOUT SHEET

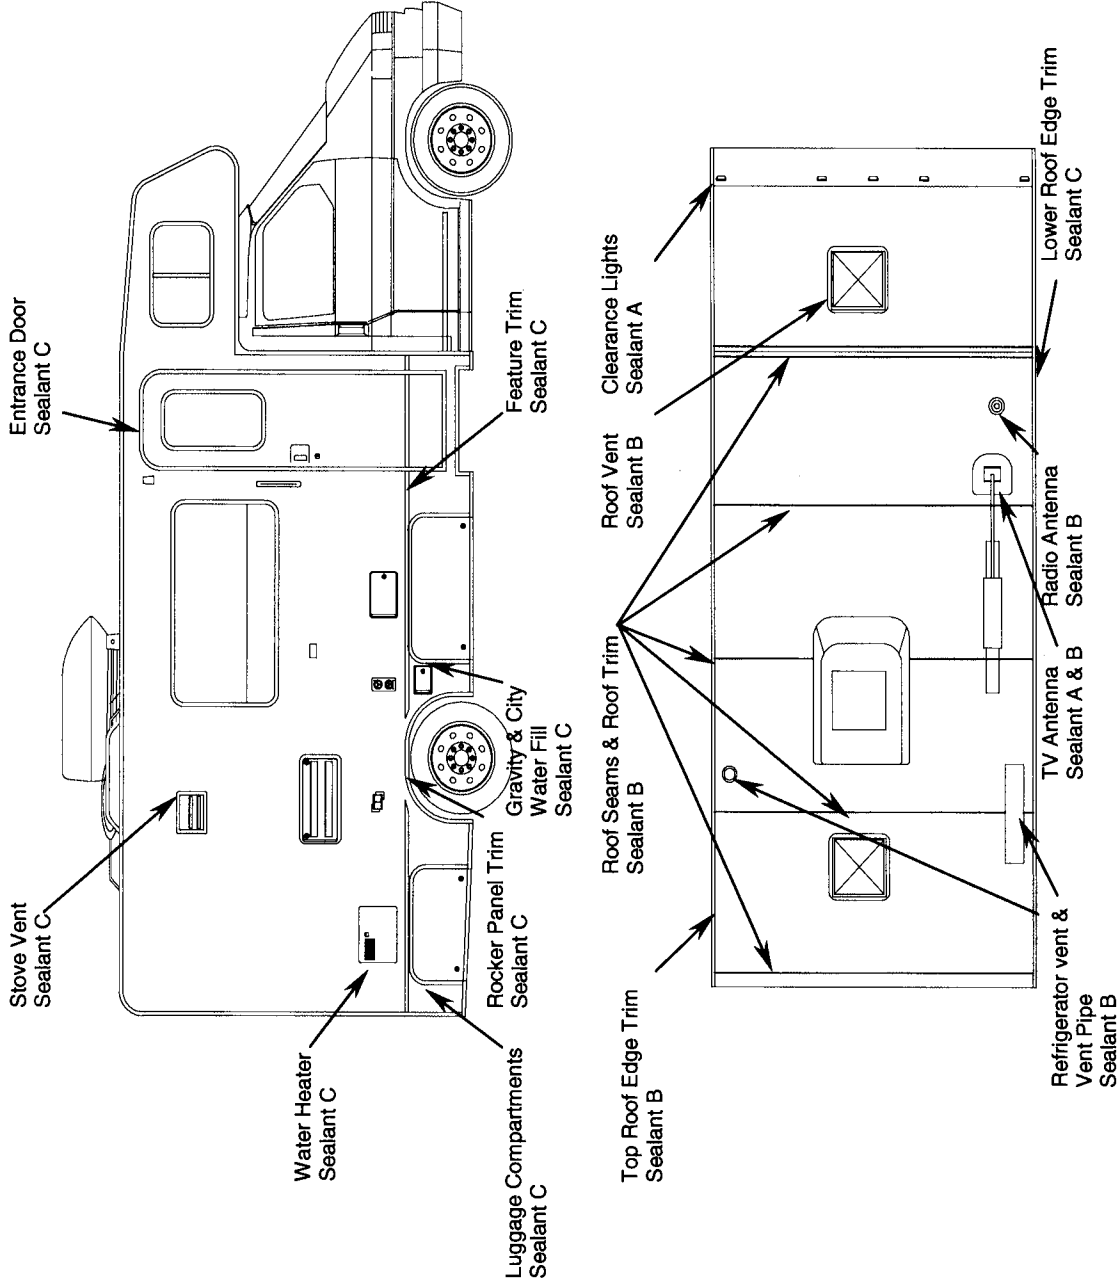

Sealants may be purchased from your Winnebago or Itasca Dealer

Sealant	Winnebago Part #
A	131264-01-02A
B	131264-03-01A
C	072889-10-000

This is only a graphic representation for sealants and does not represent actual component position.
Rev A