




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

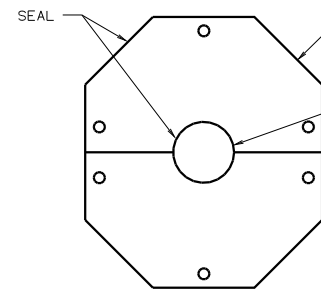

VIEW AA-AA

PLATE
109081-02-000 (2)
SCREW
G11-08-16U (6)

GROMMET
71015-18-000

3 WIRE ASM-LEFT, FRONT

LAMP-CLEARANCE, AMBER 5
113709-01-000 (5)
SCREW
G11-08-12T (10)
CONNECTOR
58028-01-000 (10)

3 TO VOLKSWAGEN
WIRE ASM-
TAIL LAMPS

WIRE ASM-COACH

2 LAMP-CLEARANCE, RED
111102-01-000 (5)
LAMP-MARKER, LENS, RED
111102-03-000 (5)
SCREW
G39-08-12U (EXT) (10)

4 LAMP ASM-CENTER BRAKE
136916-01-000
SCREW
G11-08-20T (2)
BLK/WHT - YEL
BLK - WHT

LF1-1

TO WIPER MOTOR
5 PIN HOUSING

WIRE ASM-BACKWALL
135705-01-000


TO WASHER PUMP
2 PIN HOUSING

TO WIRE ASM-
LICENSE PLATE LAMP
2 PIN HOUSING

CONNECTOR-SOCKET, TRAILER
SCREW
101618-01-000 (2)

LAMP ASM
112126-03-000 (RH)
112126-04-000 (LH)
112126-05-000 (RH)
112126-06-000 (LH) } 27A
SOCKET-LAMP
112709-01-000 (2)
112709-02-000 (2)
112709-03-000 (2)
BULB
112707-01-000 (4)
112708-01-000 (2)
BRACKET ASM-TAIL LAMP
113778-03-000 (2)
SCREW
G39-10-209 (4)
GROMMET
23942-01-000 (2)

LEX 2UL LEX 2CA 6 7
SEE DETAIL AB
FOR WIRING
CONNECTIONS

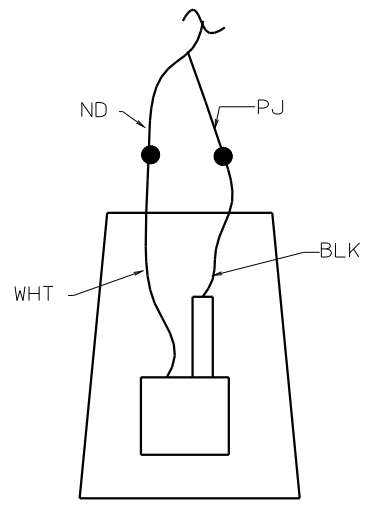

DETAIL AB

27A EXT FULL BODY PAINT PKG #1

- 7 INSTALL WITH WIRE TOWARD ROOF.
- 6 NOT USED ON THE 222S.
- 5 CONNECT WIRE HX (YEL) TO RED WIRE AND WIRE MS (WHT) TO WHT WIRE.
- 4 ON INTERIOR OF CAP, GRIND OFF TIP OF SCREW PRIOR TO SEALING (TO PROVIDE INNER LINER CLEARANCE).
- 3 SEE WIRING INSTL-FRONT END FOR ADDITIONAL INFORMATION.
- 2 LOCATE ON CENTER OF HOLE IN CAP ASM-REAR.

1. CONNECTOR-PLUG, TRAILER 113589-01-000 TO BE SUPPLIED LOOSE IN COACH WITH TRAILER TOW PACKAGE.

NOTES:

X-X FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

COPYRIGHT 2003 WINNEBAGO INDUSTRIES, INC. WINNEBAGO 04 200 SERIES	
DATE	UNSPECIFIED TOLERANCES ARE:
DATE	WHOLE DIM (XX) ±
DATE	ONE-PLACE (X.X) ±
DATE	TWO-PLACE (X.XX) ±
DATE	ANGLE
DATE	THIRD ANGLE PROJECTION
LAYOUT NO.	TITLE: WIRING INSTL-EXTERIOR LAMPS
DIA #	SCALE: NONE
DO NOT SCALE DIMENSIONS	SHEET NO. 144709
ALL DIMENSIONS ARE IN MILLIMETERS	REF: 141399 A 08/11/03